

 **NEW LAND**

New Generation of Appliance




دستگاه آب گیری مرکبات

مدل: NL-2502S

فارسی ☐

English ☐

نام و موقعیت بخش‌های کلیدی

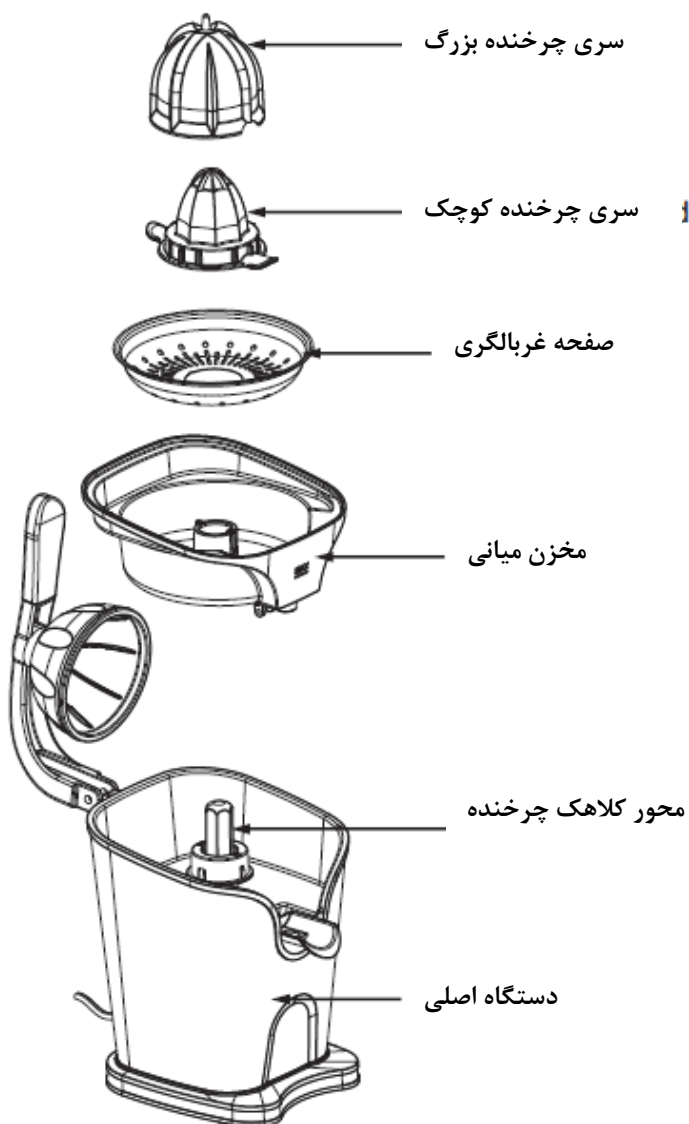

پیش از اولین استفاده

۱. خطر: وسایل موجود در بسته را دور از دسترس کودکان نگاه دارید، ممکن است به آنها آسیب برساند.
۲. بسته آب‌گیری مرکبات را باز کنید و تمام محتویات بسته‌بندی را خارج کنید.
۳. دستگاه آب‌گیری را برای هرگونه آسیب قابل رویت آزمایش کنید و بررسی کنید آیا تمام قسمت‌ها در بسته هستند یا خیر.
۴. باید دستگاه را پیش از استفاده برای اولین بار تمیز کنید.
۵. پایه موتور را با یک پارچه مرطوب تمیز کنید.
۶. پیش از استفاده از دستگاه آب‌گیری برای اولین بار، مخروط‌ها، صافی، مخزن آب-میوه و سرپوش گرد و غبار شفاف را با آب گرم و چند قطره مایع شوینده شسته و آبکشی کنید.

عملکرد

۱. دستگاه آب‌گیری را راه‌اندازی کنید.
۲. دستگاه را روی سطحی صاف که تمیز کردن آن آسان است قرار دهید.
۳. سیم برق را از محفظه نگهداری سیم - به طولی که نیاز دارید - باز کنید (در زیر آب‌میوه‌گیری). اطمینان حاصل کنید سیم به درستی وصل باشد.
۴. دوشاخه را به یک خروجی پریز با مشخصه 50Hz، AC230V وصل کنید.

انتخاب لوازم

۱. بسته به اندازه میوه‌ای که قصد آب‌گیری آن را دارید، می‌توانید از مخروط بزرگ یا کوچک استفاده کنید.

۲. مخروط بزرگ برای آب‌گیری از مرکبات بزرگ، نظیر گریپ‌فروت، پرتقال و غیره مناسب است.
۳. مخروط کوچک برای مرکبات کوچک نظیر لیمو، لیمو ترش و غیره مناسب است.
۴. مخروط آب‌گیری کوچک را مستقیماً بر روی محور محرک جای دهید.
۵. اگر تمایل دارید از مخروط بزرگ استفاده کنید، مخروط کوچک را روی محور محرک قرار دهید. سپس مخروط بزرگ را در بالای باله‌های مخروط کوچک قرار دهید.
۶. باید احساس کنید شکاف‌های مخروط بزرگ بر روی باله‌های چرخنده در مخروط کوچک به درستی قرار گرفته‌اند.
۷. برای جداسازی مخروط‌ها، مخروط بزرگ را بالا کشیده و خارج کنید.

آب‌میوه‌گیری

احتیاط: اگر فشار بیش از حد بر مخروط آب‌میوه‌گیری وارد کنید، ممکن است موتور خراب شود.

۱. درپوش گرد و غبار شفاف را بردارید.
۲. مخروط مناسب را بر روی محور محرک تثبیت کنید.
۳. مخروط مناسب آب‌میوه بر روی استوانه حرکت
- الف) اگر تمایل دارید آب‌میوه را درون مخزن جمع کنید، دهانه را به سمت بالا فشار دهید تا آن را ببندید.
- ب) اگر می‌خواهید آب‌میوه مستقیم درون یک لیوان بریزد، دهانه را به سمت پایین فشار دهید تا آن را باز کرده و یک پایه زیر آن قرار دهید.
۴. مرکبات را دو نیم کرده و از سمت نیمه‌ی بریده شده آن را بر روی مخروط فشار دهید. هنگامی که میوه را فشار دهید آب‌میوه‌گیری به صورت خودکار روشن شده

و مخروط شروع به چرخیدن می‌کند. به محض آنکه فشار روی مخروط را کم کنید آب‌میوه‌گیری به‌صورت خودکار خاموش می‌شود. مخروط پالپ میوه را خراشیده و آب‌میوه را از آن می‌گیرد. آب‌میوه از طریق صافی، از جاییکه می‌تواند، به درون لیوان یا به درون مخزن جاری می‌شود (دهانه باید باز باشد). صافی پالپ‌های درشت و دانه‌ها را نگه می‌دارد.

۵. برای حداکثر کردن مقدار آب‌میوه استخراج شده از یک میوه، میوه را چندین بار بر روی مخروط فشار دهید.

پس از استفاده

۱. مخروط، صافی، مخزن آب‌میوه و محور محرک را از دستگاه جدا کرده و آنها را تمیز کنید.
۲. دستگاه را از برق بکشید.

توصیه آب‌میوه‌گیری

۱. آب مرکبات باید فوراً مصرف شوند و هیچگاه نباید در یک محفظه فلزی نگهداری شوند.
۲. آب‌میوه مرکبات برای اختلاط عالی هستند. برای مثال، می‌توانید برای ویتامین C بیشتر آب پرتقال را با آب لیمو مخلوط کنید.
۳. آب‌میوه تازه فشرده شده به کوکتل‌ها ترکیبی خاص از تندی و طعم بهتر می‌دهد. آب لیمو نیز در چای داغ خوشمزه بوده و بعلاوه به شما کمک می‌کند در زمان سرماخوردگی شدید، دفاع خود را افزایش دهید.

تمیزکاری

خطر:

۱. پیش از تمیز کردن آب مرکبات گیری را از برق جدا کنید.
۲. پایه موتور نباید در آب یا دیگر مایعات غوطه‌ور شود یا زیر آب جاری قرار گیرد زیرا ممکن است به شما شوک برقی دهد.
۳. مخروطه‌های آب‌گیری، صافی و مخزن آب‌میوه را می‌توان در ماشین ظرف‌شویی قرار داد.
۴. پایه موتور را با یک پارچه مرطوب دستمال بکشید.
۵. اگر به‌صورت مکرر از دهانه مخزن آب‌میوه گیری استفاده می‌کنید، ممکن است پالپ راه دهانه را ببندد. بنابراین پس از هر استفاده دهانه را تمیز کنید.

نگهداری‌های مهم

در هنگام استفاده از دستگاه برقی، همواره احتیاط‌های پایه باید رعایت گردد، از جمله موارد زیر:

۱. پیش از کار کردن تمامی دستورالعمل‌ها را مطالعه کنید.
۲. اگر اختلالی ایجاد شد، پس از استفاده، اگر از آب مرکبات گیری برای یک دوره طولانی استفاده نمی‌کنید، پیش از تمیز کاری، پیش از جدا کردن یا پس از قرار دادن مخروط، دوشاخه اصلی را از پریز دیواری جدا کنید. همواره از دوشاخه برای جدا کردن از پریز استفاده کنید و نه سیم برق.
۳. در مورد آسیب به لوازم احتیاط کنید.
۴. اگر در هنگام آب‌گیری فشار زیادی را بر روی مخروط اعمال کنید ممکن است موتور بسوزد.

۵. جهت قرار دادن آبمیوه گیری اتصال را حفظ کنید.
۶. اطلاعات مهم برای قرار دادن آبمیوه گیری را در نظر بگیرید.
۷. آبمیوه گیری را روی سطحی تراز قرار دهید که ترشحات به آن آسیبی نمی‌رساند، زیرا همواره نمی‌توان از ترشحات در حین آبگیری اجتناب کرد. تمیز کردن سطح انتخابی باید آسان باشد.
۸. آبمیوه گیری را روی سطح داغ قرار ندهید، نظیر بشقاب داغ، یا نزدیک شعله مستقیم.
۹. آب مرکبات گیری شما با یک پایه مکنده تجهیز شده است. پایه مکنده به هر سطح صافی که بتواند به خوبی می‌چسبد، سطح باید صاف و همچنین عاری از گرد و غبار یا روغن باشد. پایه مکنده نمی‌تواند به یک سطح بافت‌دار بچسبد. پیش از آنکه دستگاه را بر روی سطح فشار دهید پایه مکنده را کمی مرطوب کنید.
۱۰. هیچگاه پایه مکنده را بر روی سطوح حساس جای ندهید، برخی از پوشش‌های مصنوعی یا رنگ‌ها ممکن است در تماس با لوازم یا پایه مکنده واکنش معکوس نشان دهند. این کار ممکن است منجر به ماندن اثر بر روی سطح شود.
۱۱. هیچگاه از محصولات تمیزکننده‌ی تیز یا ساینده استفاده نکنید، زیرا ممکن است به سطوح آسیب برسانند.
۱۲. جهت محافظت در برابر شوک الکتریکی، سیم برق، دوشاخه یا خود دستگاه را در آب یا دیگر مایعات غوطه‌ور نسازید.
۱۳. این دستگاه برای استفاده توسط افرادی (از جمله کودکان) با قابلیت‌های روحی یا حسی کم، یا افرادی با فقدان تجربه و دانش در نظر گرفته نشده است، مگر بر آنها نظارت شده و دستورالعمل مربوط به استفاده از دستگاه توسط فردی مسئول امنیت به آنها آموزش داده شود. بر کودکان باید نظارت شود تا اطمینان حاصل شود که با دستگاه بازی نکنند.

۱۴. پس از استفاده و پیش از تمیز کاری دوشاخه را از برق بکشید. پیش از قرار دادن لوازم بر روی یکدیگر یا جدا کردن آنها اجازه دهید دستگاه خنک شود.
۱۵. هیچ دستگاهی را با یک سیم برق یا دوشاخه خراب یا پس از بد کار کردن دستگاه، یا آسیب رسیدن به آن به هر طریقی استفاده نکنید. دستگاه را برای آزمایش، تعمیر با تنظیم به نزدیک ترین مرکز خدمات مجاز ببرید.
۱۶. استفاده از لوازم جانبی توصیه نشده توسط تولید کننده دستگاه، می تواند منجر به آسیب شود.
۱۷. در هنگام عدم استفاده، هیچ یک از تجهیزات را بجز آنهایی که توسط تولیدکننده توصیه شده است در این دستگاه ذخیره نکنید.
۱۸. اگر سیم برق آسیب دیده است، باید توسط تولیدکننده، نماینده خدمات آن یا افراد مجاز جایگزین شود تا از خطر اجتناب شود.
۱۹. این دستگاه نباید در دسترس افراد ضعیف، غیر مسئول یا دارای مشکلات روانی (از جمله کودکان) باشد، مگر تحت راهنمایی یا کمک از سوی فردی که مسئولیت امنیت را به عهده دارد. بر کودکان باید نظارت بیشتری صورت گیرد تا اطمینان حاصل شود با آن بازی نمی کنند.

خطا/چاره


۱. موتور روشن نمی شود.
۲. موتور در حال آب گیری از کار متوقف می شود.
۳. اگرچه دهانه بسته است، همچنان آب میوه چکه می کند.
۴. آیا دوشاخه اصلی به پریز برق درست وصل شده است؟
۵. آیا خیلی سخت بر روی مخروطی فشار می آورید؟
۶. آیا مقداری از پالپ درون دهانه باقی مانده است؟

انهدام

مفهوم سطل زباله چرخدار محذوف: دستگاه‌های الکتریکی را بعنوان زباله شهری تفکیک نشده منهدم نسازید، از تاسیسات جمع‌آوری مجزا استفاده کنید. برای اطلاعات مربوط به سیستم‌های جمع‌آوری موجود با مقامات محلی خود تماس بگیرید. اگر دستگاه‌های الکتریکی در محل دفن مواد زائد جامد منهدم شوند، مواد بسیار خطرناک می‌تواند به آب زیرزمینی نشت کرده و وارد زنجیره غذایی شوند و به سلامت و رفاه شما آسیب برسانند. هنگامی که دستگاه‌های قدیمی را با جدید جایگزین می‌کنید، خرده فروش قانونا متعهد است دستگاه قدیمی را برای انهدام حداقل به‌صورت رایگان از شما پس بگیرد.

ما حق اصلاحات را حفظ می‌کنیم.

Key parts name and locations

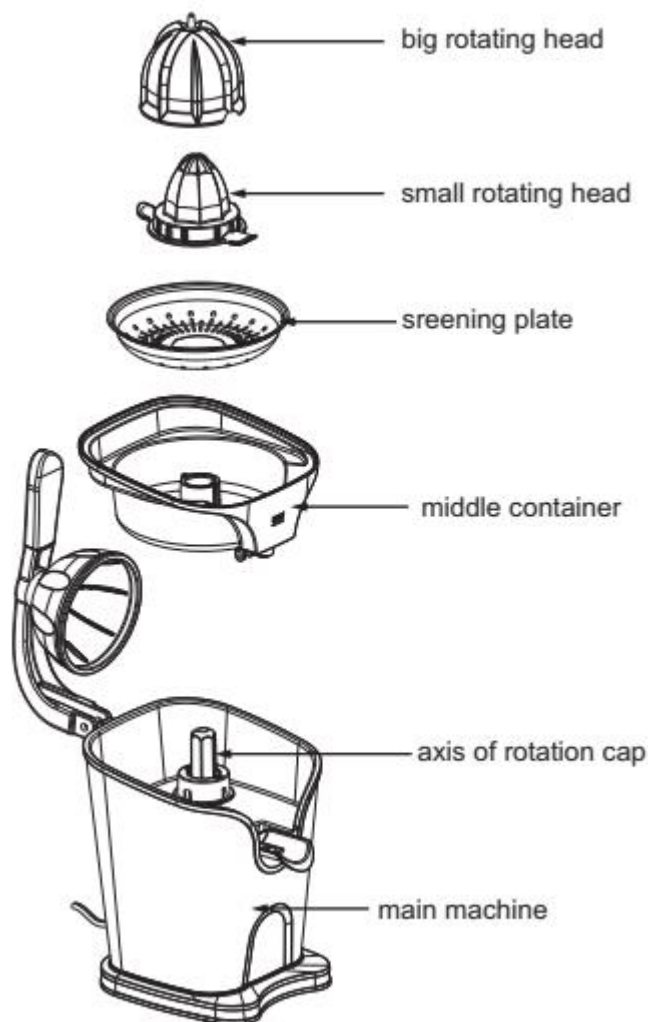

Before first use

- 1.Danger: Keep the packaging material away from children .they could suffocate.
- 2.Unpack the citrus juicer and remove all of the packaging.
- 3.Material Examine the juicer for visible damage and check that all of the parts are present.
- 4.You should clean the appliance before using it for the first time.
- 5.Wipe the motor base with a damp cloth.
- 6.Before using the juicer for the first time, rinse the cones, strainer, juice container and transparent dust lid with warm water and a few drops of washing-up liquid.

Operation

- 1.Setting up the juicer.
- 2.Stand the appliance on an even surface that is easy to clean.
- 3.Unwind the power cord – to the length you require – from the cord storage compartment (underneath the juicer). Make sure that the cord is correctly.
- 4.Connect the mains plug to a AC230V,50Hz socket outlet

Selecting accessories

- 1.Depending on the size of the fruit you are juicer, you can use the large or the small cone
- 2.The large cone is suitable for juicing small citrus fruit ,such as grapefruit, oranges etc.
- 3.The small cone is suitable for juicing small citrus fruit, such as lemons, limes etc.
- 4.Fit the small juicing cone directly onto the drive shaft
- 5.If you wish to use the large cone, fit the small cone onto the drive shaft. Then fit the large cone over the top of the small cone.
- 6.You must feel the notches in the large cone clip into place over the stirring wings on the small cone.
- 7.To separate the cones, pull the large cone up and off.

Juicing

Caution: if you apply too much pressure to the juicing cone, the motor may seize.

- 1.Remove the transparent dust lid.

2. Fit the appropriate cone onto the drive shaft.

3. The juice appropriate cone onto the drive shaft.

a) If you wish to collect the juice in the container, press the spout upwards to close it.

b) If you want the juice to run straight into a glass, press the spout downwards to open it and place a stand under it.

4. Cut a citrus fruit in half and press the cut end of one fruit half onto the cone. The juicer switches on automatically when you press the fruit down and the cone starts to turn. The juicer automatically switches off as soon as you reduce pressure on the cone. The cone scrapes the pulp out and squeezes the juice from the fruit. The juice flows through the strainer into the juice container from where it can run into a glass (the spout must be open). The strainer keeps back thick pulp and seeds.

5. To maximize the quantity of juice extracted from a fruit, press a fruit onto the cone several times.

After use

1. Remove cone, strainer, juice container and drive shaft from the appliance and clean them.

2. Unplug the appliance.

Juicing advice

1. Citrus fruit juices should be consumed immediately and never stored in a metal container.

2. Citrus juices are ideal for mixing. For example, you can mix orange juice with lemon juice for and extra vitamin C.

3. Freshly squeezed juice gives cocktails a particularly tangy twist and better flavour. Lemon juice is also delicious in hot tea and additionally helps you build up your defenses when you have a cold.

Cleaning

Danger:

1. Unplug the citrus juicer before you clean it.

2. The motor base must not be immersed in water or other liquids or held under running water as this could give you an electric shock.

3. The juicing cones, strainer and juice container can go in the dishwasher.

4. Wipe the motor base with a damp cloth.

5.If you use the spout on the juice container frequently, pulp may build up in the spout. Therefore clean the spout after each use.

Important safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1.Read all instructions before operating
- 2.Remove the mains plug from the wall socket outlet,... ..if a disturbance occurs After use if the citrus juicer id out of use for a prolonged period of time Before cleaning the citrus juicer before removing and inserting the pressing cones Always pull the plug not the cord
- 3.Caution material damage
- 4.if you apply too much pressure to the cone while juicing the motor may seize
- 5.keep the connection for placing the juicer
- 6.Important information for placing the juicer
- 7.place the juicer on a level surface that will not be harmed by splashes of juice as splashing cannot always be avoided .The surface should be easy to clean
- 8.DO not stand the juicer on hot surfaces ,such as hotplates or near naked flames
- 9.Your citrus juicer is equipped with suction feet .The suction feet will adhere to any smooth surface For them to adhere well ,the surface must be flat and also free of dust or grease .The suction feet cannot adhere to a textured surface Slightly moisten the suction feet before you press them onto the surface
- 10.Do not fix the suction feet to sensitive surfaces .Some paints or synthetic coating may react adversely with the material of the suction feet and soften them This could cause them to leave marks
- 11.Never use abrasive or caustic cleaning products ,as these mgt damage the surfaces
- 12.To protect against electrical shock ,do not immerse cord ,plug or appliance itself in water or other liquids .
- 13.This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities ,or lack of experience and knowledge ,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety Children should be supervised to ensure that they do not play with the appliance
- 14.Unplug from outlet when not in use and before cleaning .Allow to cool before putting on or taking off parts

15. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment. 16. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

17. Do not store any materials other than manufacturers recommended accessories in this unit when not in use.

18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

19. This machine is unavailable for the weakness, unresponsive or psychopathic person (including children), unless under the direction or help from the person who has the responsibility for security. Children should be overseen, so it can be testified that they are not playing with it.

Fault/remedy

1. Motor won't start

2. Motor stops running while juicing

3. Although the spout is closed, juice still drips out

4. Is the mains plug connected properly to the socket outlet?

5. Are you pressing on the cone too hard?

6. Are there any bits of pulp left in the spout?

Disposal

Meaning of crossed – out wheeled dust bin: DO not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge. We reserve the right to make amendments.



QUALITY EXPERIENCE



CITRUS JUICER
Model: NL-2502S

فارسی ☐

English ☐