

NEW LAND

New Generation of Appliance




آب مرکبات گیری با دستگیره

مدل: NL-2778BL

فارسی ☐

English ☐

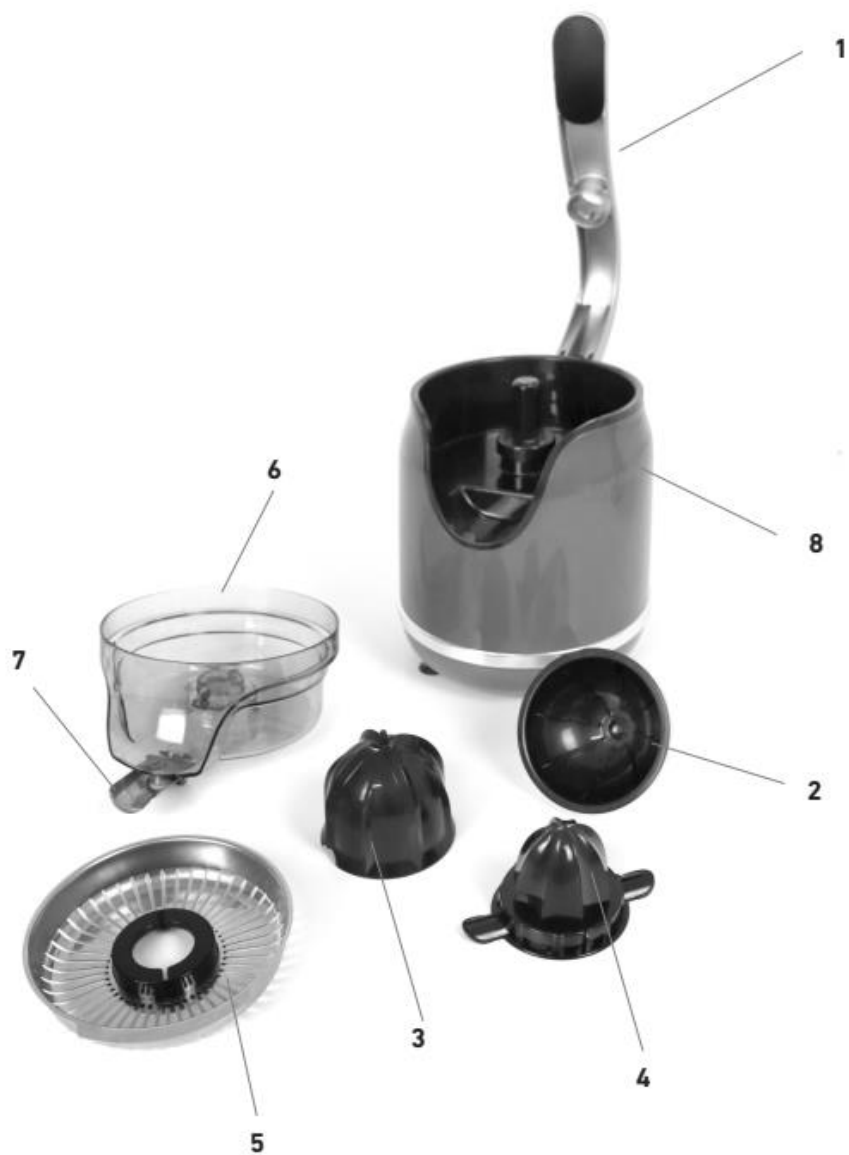

اجزای دستگاه

۱. دستگیره
۲. درپوش مخروطی
۳. مخروط آبگیری بالایی
۴. مخروط آبگیری پایینی
۵. تنظیم کننده فیلتر پالپ
۶. مخزن
۷. خروجی ضد چکه
۸. بدنه اصلی

توجه:

- قبل از استفاده از دستگاه، این دستورالعمل را به دقت بخوانید و برای مراجعات آینده نزد خود نگه دارید.
- کودکان ۸ سال به بالا و افراد دارای نقص فیزیکی، حسی و روانی تحت نظارت دیگران می توانند از این دستگاه استفاده نمایند. البته آنها نیز باید دفترچه راهنما را به دقت بخوانند و با خطرات احتمالی آشنا باشند.
- کلیه پلاستیک و بسته بندی دستگاه را دور از دسترس کودکان نگه دارید چون ممکن است برایشان خطرناک باشد.
- قبل چک کردن و تطبیق ولتاژ دستگاه و محل زندگیتان، این دستگاه را به برق نزنید.
- دستکاری یا جایگزینی هر یک از اجزا باید توسط مراکز مجاز صورت بگیرد.

- وقتی از دستگاه استفاده نمی کنید یا موقع جدا کردن و نصب کردن اجزا، دستگاه را از برق بکشید.
- نکته بسیار مهم: هیچ گاه بدنه اصلی را در آب یا مایعات دیگر فرو نبرید.
- به اجزای متحرک دستگاه دست نزنید.
- این دستگاه فقط برای مصارف خانگی طراحی شده است. بیشتر از ۲ دقیقه به صورت ممتد از دستگاه استفاده نکنید.
- اجازه ندهید که کودکان با این دستگاه بازی کنند و از دسترس آنها دور نگه دارید.
- دستگاه و کابل آن را از دسترس کودکان زیر ۸ سال دور نگه دارید.
- تمیز کردن و نگهداری از دستگاه توسط کودکان بالای ۸ سال نباید بدون نظارت صورت بگیرد.
- دستگاه را روی سطوح داغ قرار ندهید.
- اگر کابل دستگاه آسیب دید، باید توسط خدمات پس از فروش یا افراد متخصص تعویض یا تعمیر شود تا از هرگونه خطر جلوگیری گردد.

دستورالعمل استفاده از دستگاه

- قبل از استفاده، قطعاتی که با مواد غذایی تماس دارند جدا کرده و تمیز کنید.
- آبمیوه گیر روی سطح صاف قرار داده و مخزن (۶) را به همراه فیلتر (۵)، مخروط آبگیری پایینی (۴) و مخروط آبگیری بالایی (۳) روی بدنه اصلی

نصب کنید. اندازه‌های مخروطی متفاوت برای میوه‌ها با سایز متفاوت در نظر گرفته شده است.

- به خاطر داشته باشید، مخروط آبگیری بالایی روی مخروط آبگیری پایینی قرار می‌گیرد و بدون مخروط آبگیری پایینی در جای خود چفت نمی‌شود.
- دستگاه را به برق بزنید.
- میوه‌ها را از وسط نصف کنید. یک لیوان یا محفظه را زیر خروجی قرار دهید (۷). با اینکار، آبمیوه دقیقاً داخل لیوان یا محفظه می‌ریزد یا اینکه می‌توانید آبمیوه را در مخزن ذخیره کنید.
- میوه را روی مخروط قرار دهید و دستگیره را پایین بکشید (۱). دستگاه آبمیوه‌گیری به طور خودکار شروع به کار می‌کند. دستگیره را بیش از این پایین نکشید.
- وقتی به میزان آبمیوه دلخواه خود رسیدید خروجی را بلند کنید (۷) و به موقعیت اولیه خود ببرید تا آبمیوه چکه نکند.

نگهداری و تمیز کردن

- قبل از تمیز کردن، دستگاه را حتماً از برق بکشید.
- بدنه اصلی دستگاه هرگز نباید در آب غوطه‌ور شود. فقط با دستمال پاک کنید.
- باقی اجزا که قابل جدا شدن هستند را می‌توان با آب و صابون شست و بعد آبکشی کرد. هرگز از ظرفشویی برای شستن آنها استفاده نکنید. می‌توانید درپوش مخروطی (۲) را نیز جدا کرده و تمیز کنید؛ کافیس آن را بکشید.

پس از هر بار استفاده سریع آن را تمیز کنید زیرا پالپ خشک شده میوه به سختی قابل تمیز کردن است.

- از مواد شیمیایی و قوی یا فلزات که باعث آسیب به سطح دستگاه می شود استفاده نکنید.

حفاظت از محیط زیست

دستگاه را مطابق با قوانین محلی دفع کنید.

دستگاه را درون سطل آشغال معمولی قرار ندهید تا به محیط زیست کمک کنید.



گارانتی

دارنده گارانتی این دستگاه از کلیه حقوق مصوب کشور خود برخوردار می باشد. در صورت بروز هرگونه ایراد یا فروشگاه تماس بگیرید.

MAIN COMPONENTS

1. Handle.
2. Cone lid.
3. Top juicing cone.
4. Lower juicing cone.
5. Pulp filter regulator.
6. Tank.
7. Anti-drip spout.
8. Main body.



ATTENTION

- Carefully read these instructions before using your appliance for the first time and keep it for future enquires.
- This appliance can be used by children at the age of 8 or more and people with physical, sensory or mental capabilities or lack of experience and knowledge if they have been given an appropriate supervision or instruction concerning the safety use of the appliances and understand the dangers involved.
- Keep all plastic bags and packaging materials out of the reach of children. They are potentially dangerous.
- Do not connect the appliance to the mains without checking that the voltage on the rating plate and that of your household are the same.
- Manipulation or replacement of any component must be performed by an authorized service centre.
- Keep unplugged while not in use, or during its assembly, disassembly or cleaning.
- **VERY IMPORTANT: you must never immerse the main body of the appliance in water or other liquids.**
- Avoid in contact with the moving parts.
- This appliance has been designed for domestic use only. Do not use uninterruptedly for more than 2 minutes.
- Don't allow children play with the appliance. Keep the appliance out of the reach of children.
- Keep the appliance and the cable cord out of the reach of children less than 8 years old.
- The cleaning and maintenance done by users, can not be done by children without any supervision, unless they are over 8 years and they are under supervision.

- Do not use on hot surfaces.
- If the power cord is damaged, it must be replaced by the manufacturer or by its after-sales service or similar qualified personnel in order to avoid any danger

INSTRUCTIONS OF USE

- Before using, remove and clean the parts that are going to be in contact with the food.
- Place the citrus juicer on a flat surface and assemble the tank (6), the filter (5), the lower juicing cone (4) and the upper juicing cone (3) on the main body. The different size cones are used to obtain all the juice from the different sized pieces of fruit.
- **You must bear in mind that the upper juicing cone is inserted on the lower juicing cone and it cannot be assembled on to the appliance without the lower cone.**
- Plug the appliance into the mains.
- Cut the fruit into two halves, place a glass or a container under the spout (7) and press down to lower it. This way the juice will be poured directly into the glass or container, else it will the juice will remain in the tank.
- Place the fruit in the cone and move down the handle (1). The juicing machine will begin to function automatically. Do not press in excess with the handle.
- Once you have obtained the necessary juice, raise the spout (7) to its original position so the juice does not drip.
- If you wish to continue making juice, place a glass under the spout and repeat the process.

MAINTENANCE AND CLEANING

- Before you proceed to cleaning it, ensure the citrus juicer is unplugged from the mains.
- The main body of the appliance must never be immersed in water. Clean it with a slightly damp cloth.
- The rest of the components which can be removed may be cleaned with soap and water, taking care to rinse carefully afterwards. Never clean in the dishwasher. You also can remove the cone lid (2) for cleaning, just by pulling it. Try to clean it immediately after its use, as the dry pulp of the fruit is very difficult to remove.
- Do not use chemical or abrasive products, such as metallic scourers, which may deteriorate the surfaces of the appliance.

ENVIRONMENT PROTECTION

- Dispose the appliance according to the local garbage regulations.
- Never throw it away to the rubbish. So you will help to the improvement of the environment.





QUALITY EXPERIENCE



**Citrus Juicer With
Handle**

Model: NL-2778BL

فارسی ☐

English ☐