



QUALITY EXPERIENCE



Coffee Grinder
Model: NL-2954BA

فارسی ☐
English ☐

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before use check that the voltage of wall outlet correspond to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
4. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
7. Do not let cord hang over edge of table or hot surface.
8. Do not immerse the motorized base in liquid, or place in dishwasher. Damage to the unit will occur if submerged in liquid or filling the liquid into the container. Only the top cover may be immersed.
9. Close supervision is necessary when your appliance is being used near children or infirm persons.
10. Ensure fingers are kept well away from moving parts.
11. Do not remove cover until blade has completely stopped.
12. Do not attempt operation without the cover being in place.
13. Do not run the appliance without load.
14. The use of accessory not recommended by the manufacturer may cause injuries to persons.

15. Immediately turn off the appliance and send it to the authorized service agent for repair if abnormal sound, abnormal taste, excessive heat and smoke are found during use.
16. Remove the dust and other foreign objects from the appliance before use.
17. It is forbidden to disassemble, repair and rebuild the body.
18. After each use, turn the grind control to the "1" position and ensure that the motor stops completely before disassemble.
19. Do not plug and unplug the appliance with wet hands or wet towels.
20. Do not drag or bind the power cord.
21. Do not shake or drop the appliance strongly.
22. Check grinding chamber for presence of foreign objects before using.
23. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.
25. Misuse may cause potential injury.
26. Do not operate the appliance for other than its intended use.
27. Do not use outdoors.


SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

SPECIAL NOTES ON PLUG

This appliance incorporated a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug can not fit fully into the socket, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way as this is a safety feature.

KNOW YOUR COFFEE GRINDER

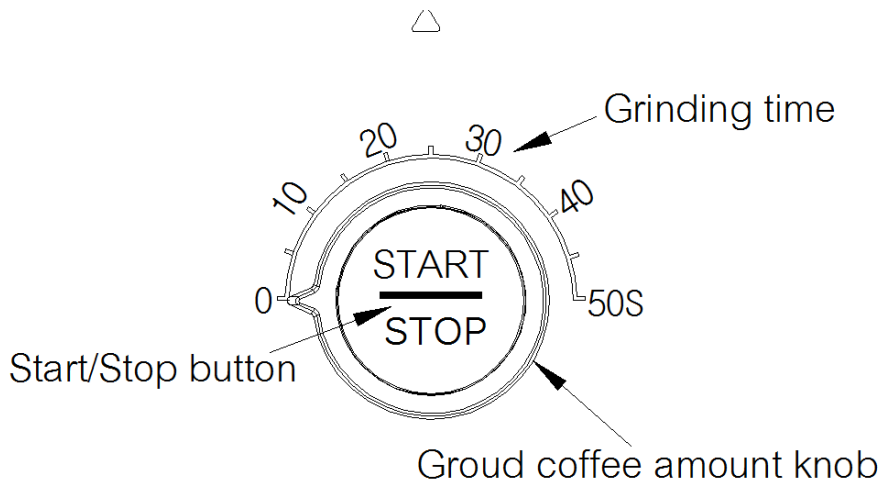

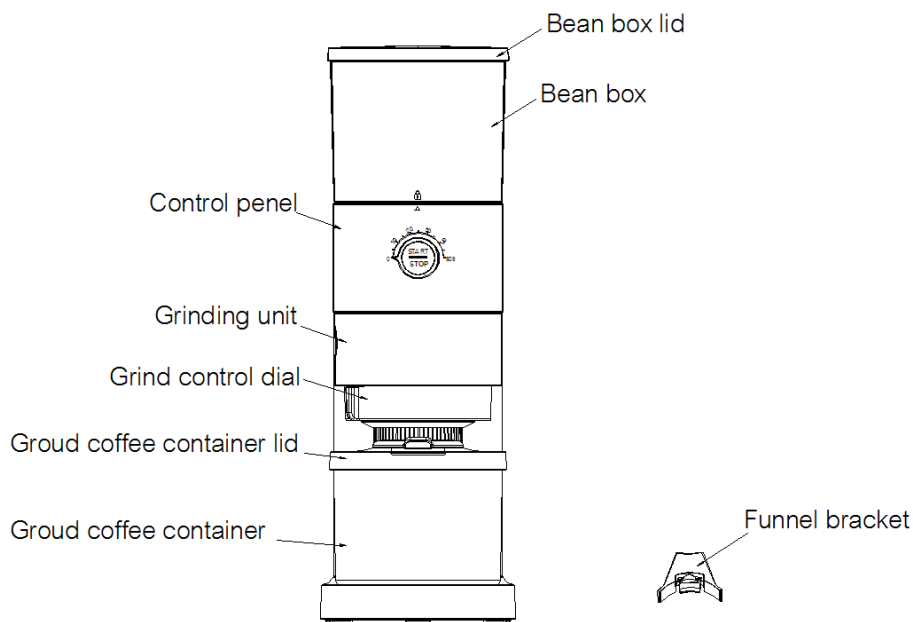

BEFORE THE FIRST TIME

1. Carefully unpack your coffee grinder and remove all packing materials.
2. To remove any dust that may have accumulated during packaging.
3. Rinse the bean box, bean box lid, ground coffee container lid and ground coffee container with water and then dry thoroughly.

CAUTION: Never immerse the body in water for cleaning and do not fill the grinding unit with water for cleaning.

OPERATION

I. GRIND COFFEE BEANS AUTOMATICALLY

2. Place the coffee grinder on a flat surface.

3. Check and make sure that the coffee channel outlet cover must be closed well (see Fig.1), otherwise, the grinding unit can be not installed well and the appliance can not work.

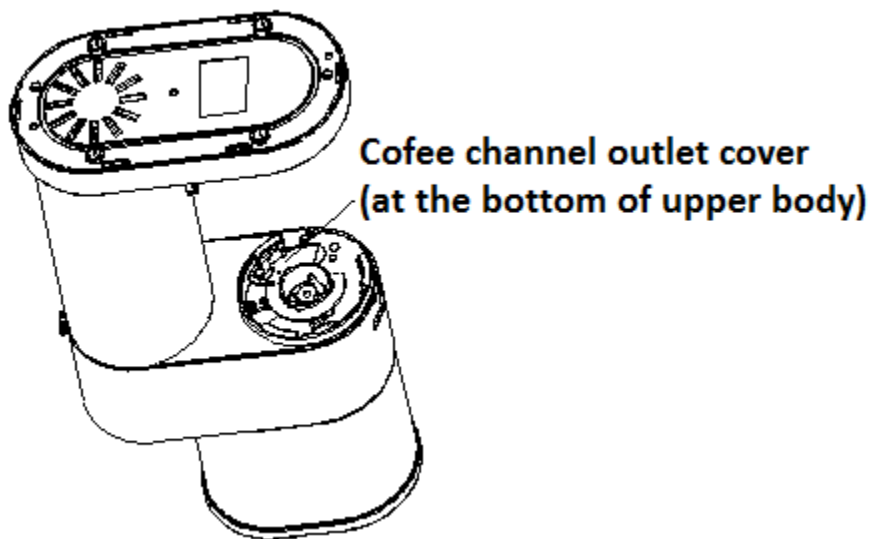


Fig.1

4. Install the grinding unit onto the upper body as follows: Firstly, align the “▲” symbol on the grinding unit with the “☞” symbol on the upper body (see Fig.2), then rotate the grinding unit clockwise until the “▲” symbol aligns with the “☞” symbol (see Fig.3). If you want to remove the grinding unit, firstly run the coffee grinder to finish grinding the beans in the bean box, then press down the release button and simultaneously turn the grinding unit anticlockwise to remove the grinding unit from the upper body.

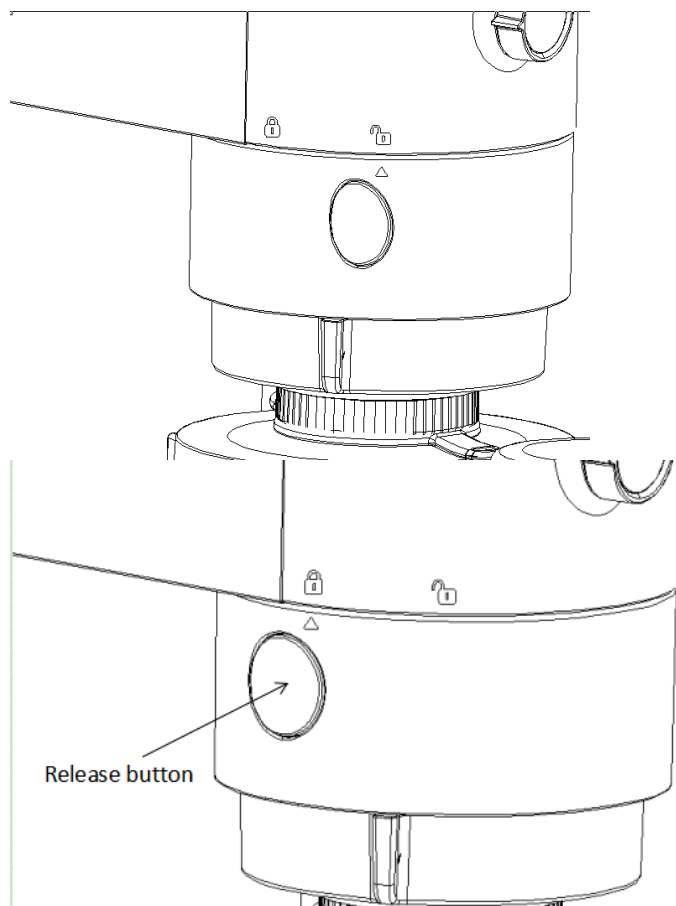


Fig.2

NOTE: The grinding unit is equipped with a microswitch so that it must be assembled in position before operate, or the appliance will not work.

4. Install the bean box onto the bean box holder as follows: Firstly, align the “■” symbol on the bean box with the “▲” symbol on the upper body (see Fig.4), then rotate the bean box clockwise until the “■” symbol on the bean box aligns with the “▲” symbol on the bean box holder (see Fig. 5). If you want to remove the bean box, firstly run the coffee grinder

to finish grinding the beans in the bean box, then rotate the bean box counterclockwise for 90° to remove the bean box from the bean box holder.

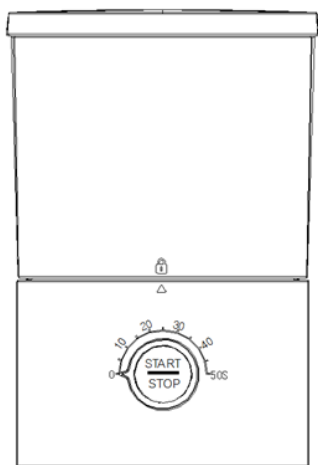


Fig.4

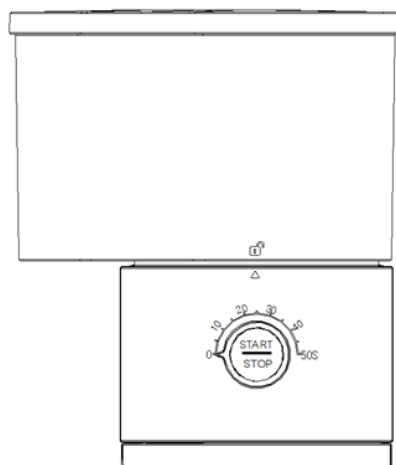


Fig.5

5. Pour appropriate amount of coffee beans into the bean box, it must be noted the quantity of coffee beans shall not exceed 240g.
6. Close the bean box lid.
7. Put the ground coffee container (with lid in position) on the ground coffee container holder. Ensure that the opening of ground coffee container shall align with the ground coffee outlet.
8. Turn the grind control dial to select your desired grind size. Turn it to the left, the ground coffee will be finer and finer, while the ground coffee will be coarser and coarser when turn the grind control dial to the right.
9. The ground coffee amount is determined by the grinding time, and you can select your desired grinding time by following Table 1. If you

do not want to adjust the grinding time, the appliance will work under the default grinding time.

Table 1

Mark		0S	10S	20S	30S	40S	50S
Grinding time	1 min (Manual setting)	2S	10S	20S	30S	40S	50S

10. Connect the appliance with the power source, the indicator of Start/Stop button blinks for three times and then it illuminates solidly.

11. Press the Start/Stop button, its corresponding indicator blinks, then the appliance starts to run.

NOTES:

(1) The appliance will enter into the sleep state if there is not any operation within 90 seconds after plug in.

(2) You can press Start/Stop button to make the appliance stop running at any time

during grinding process.

(3) The appliance must rest for 30 minutes if it is operated for 3 minutes continuously. And it is suggested to operate this appliance for less than 90s per time and a rest time of at least 90 seconds must be maintained between continuous two cycles.

(4) The appliance can not work for 6 minutes continuously within 10 minutes, and it must

rest for 30 minutes if the working time exceeds 6 minutes.

12. When desired grinding time is reached, the coffee grinder will stop working automatically and the indicators of “Start/Stop button” and the selected ground coffee amount will illuminate solidly. And all the indicator will turn off and the appliance will enter into the sleep mode if there is not any operation within 90 seconds. To reactivate the appliance, press any button.

NOTE: The maximum amount of ground coffee container is 130g, make sure the ground coffee shall not overflow.

NOTE: After finish grinding, pour the ground coffee into another container to avoid

overflow if you need to continue grinding.

13. Unplug the appliance, remove the ground coffee container lid and pour out the ground

coffee directly.

II. GRIND COFFEE BEANS MANUALLY

1. Follow the operations of Step 1-6 of “**GRIND COFFEE BEANS AUTOMATICALLY**”.

2. Turn the grind control dial to select your desired grind size.

3. Connect the appliance with the power source.

4. Install the funnel bracket onto the appliance well and then put the pressurized portafilter onto the funnel bracket and then push the pressurized portafilter forward to fix it well in position (See Fig.6).

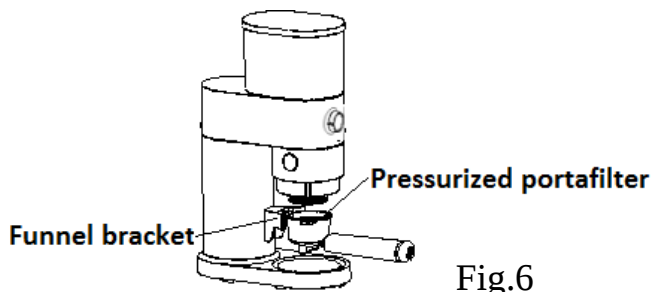


Fig.6

5. Press the Start/Stop button, then the appliance starts to run.
6. When the desired amount of ground coffee is got, remove the pressurized portafilter from the funnel bracket, then the appliance will stop working and the indicator of Start/Stop button will illuminate solidly. All the indicators will turn off and the appliance will enter into the sleep mode if there is not any operation within 90 seconds. To reactivate the appliance, press any button.

CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance and make it cool down completely before cleaning. To protect against electrical shock, do not immerse cord, plug or body in water or liquid and do not fill the grinding unit with water for cleaning. After each use, always make sure plug is first removed from wall outlet.

1. Disassemble the bean box by following the operation mentioned above, and then rinse

the bean box, bean box lid, ground coffee container and ground coffee container lid

with water, and dry them thoroughly.

2. Disassemble the grinding unit by following the operation mentioned above, then detach the ground coffee outlet cover and clean the residual coffee powder on the grinding wheel and grinding blade with a brush, and then pour the residual ground coffee out. Finally, replace the grinding

unit well in place. The grinding unit can not be put into the dishwasher for cleaning.

NOTE: Please operate carefully as the grinding wheel & grinding blade are sharp. Before remove the grinding unit, make sure that all the coffee beans in the bean box are ground completely, do not rinse the grinding unit with water.

3. Wipe the body with wet cloth and then dry it completely.
4. When do not use the appliance, store it in a dry and cool environment.

GRINDING TIPS

1. The coarse ground coffee is generally used for percolators and coffee urns. Medium ground coffee is used for drip coffee makers and steam-type espresso machines. A fine ground coffee is used for espresso machines with an electric pump.
2. For the freshest, most flavorful coffee, grind only enough for the pot you are making.
3. Coffee beans keep up to 2 months in the freezer in an airtight container and can be ground while still frozen. ground coffees left in your grinder can become stale and affect the flavor of freshly ground coffee. Be sure to clean grinding chamber, blades and grinding wheel after each use.
4. This grinder can only grind dry, brittle foods. It will not grind anything moist, extremely hard, or gummy such as whole ginger, chocolate, sesame seeds or oily spices such as cinnamon, cloves or nutmeg. Do not grind peanuts or grains such as wheat, rice, barley, or dried corn. Attempting to grind any of these foods may damage the unit. Never use it to chop ice cubes.
5. Freshly ground peppercorns have a strong aroma and taste that may affect the flavor of coffee beans ground afterward. You may want to purchase a separate grinder if you plan to grind peppercorns.

۳. این آسیاب فقط می‌تواند مواد خشک و شکننده را آسیاب کند. هیچ چیز مرطوب، بسیار سفت یا صمغی مانند زنجبیل، شکلات، دانه‌های کنجد یا ادویه‌های روغنی مانند دارچین، میخک یا جوز هندی را آسیاب نمی‌کند. بادام زمینی یا غلات مانند گندم، برنج، جو یا ذرت خشک را آسیاب نکنید. آسیاب این مواد ممکن است به دستگاه آسیب بزند. هرگز برای خرد کردن یخ از این دستگاه استفاده نکنید.
۴. دانه‌های فلفل تازه آسیاب شده دارای عطر و طعم قوی هستند که ممکن است بر طعم دانه‌های قهوه آسیاب شده بعد از آن تأثیر بگذارد. اگر قصد دارید دانه فلفل را آسیاب کنید، از یک دستگاه دیگر استفاده کنید.

۱. باکس دانه قهوه را با عملی که در بالا ذکر شد از هم جدا کنید و سپس باکس دانه قهوه، محفظه قهوه آسیاب شده و درب محفظه قهوه آسیاب شده را با آب بشویید و کاملاً خشک کنید.

۲. با انجام عملیاتی قبلاً ذکر شد، واحد آسیاب را جدا کنید. سپس، درب پوششی آسیاب قهوه را جدا کنید و پودر قهوه باقیمانده روی چرخ آسیاب و تیغه آسیاب را با برس تمیز کنید. سپس باقیمانده قهوه آسیاب شده را بیرون بریزید. در نهایت، واحد آسیاب را به خوبی در جای خود قرار دهید. واحد آسیاب را نمی‌توان در ماشین ظرفشویی شست.

نکته: لطفاً احتیاط لازم را حین استفاده از این دستگاه داشته باشید زیرا چرخ آسیاب و تیغه تیز هستند. قبل از برداشتن واحد آسیاب، مطمئن شوید که تمام دانه‌های قهوه موجود در باکس دانه قهوه کاملاً آسیاب شده‌اند. واحد آسیاب را با آب شستشو ندهید.

۳. بدنه را با پارچه مرطوب پاک کنید و سپس کاملاً خشک کنید.


۴. در صورت عدم استفاده از دستگاه، آن را در محیط خشک و خنک نگهداری کنید.

نکات مربوط به آسیاب کردن

۱. قهوه درشت آسیاب شده به طور کلی برای پرکولاتورها و کتری قهوه استفاده می‌شود. قهوه متوسط آسیاب شده برای قهوه سازهای دریپ یا فرانسه و دستگاه‌های اسپرسوساز از نوع بخار استفاده می‌شود. یک قهوه آسیاب شده خوب برای دستگاه‌های اسپرسوساز با پمپ برقی استفاده می‌شود.

۲. برای اینکه قهوه تازه‌تر و خوش‌طعم‌تر داشته باشید، به اندازه لازم برای هر بار استفاده قهوه بسایید. دانه‌های قهوه را می‌توان تا ۲ ماه در فریزر نگه داری کرد و حتی می‌توان آنها به صورت یخ‌زده آسیاب کرد. اما قهوه آسیاب شده در صورت ماندگاری بالا کهنه می‌شوند و به اندازه قهوه تازه، عطر و طعم ندارند. پس از هر بار استفاده حتماً محفظه آسیاب، تیغه‌ها و چرخ آسیاب را تمیز کنید.

۴. سری قیف خروجی روی دستگاه نصب کنید و سپس پورتافیلتر تحت فشار را سری قیف خروجی قرار دهید و سپس پورتافیلتر تحت فشار را به جلو فشار دهید تا به خوبی در موقعیت خود ثابت شود (شکل ۶ را ببینید).

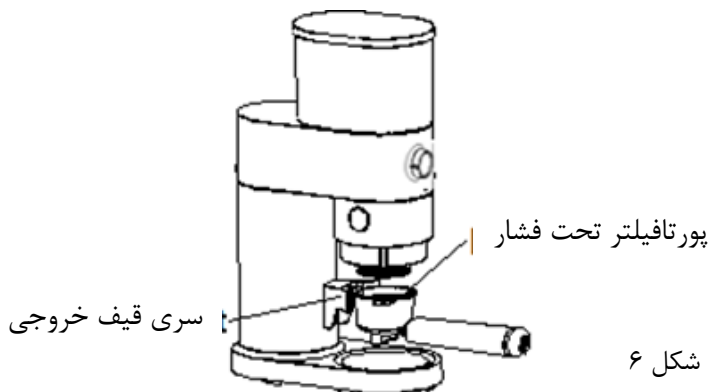

شکل ۶

۵. دکمه Start/Stop را فشار دهید، سپس دستگاه شروع به کار می‌کند.
۶. هنگامی که مقدار مورد نظر قهوه آسیاب شده به دست آمد، پورتافیلتر تحت فشار را از سری قیف خروجی خارج کنید. دستگاه متوقف می‌شود و نشانگر دکمه Start/Stop کاملاً روشن می‌شود. تمام نشانگرها خاموش می‌شوند و در صورت عدم انجام عملیات در ۹۰ ثانیه، دستگاه وارد حالت خواب می‌شود. برای فعال کردن مجدد دستگاه، می‌توانید هر دکمه‌ای را فشار دهید.

تمیز کردن و نگهداری

احتیاط: حتماً این دستگاه را از برق بکشید و قبل از تمیز کردن آن را کاملاً خنک کنید. برای جلوگیری از خطر برق‌گرفتگی، سیم و دوشاخه را در آب یا مایعات غوطه‌ور نکنید و واحد آسیاب را برای تمیز کردن با آب نشویید. پس از هر بار استفاده، همیشه دوشاخه را از پریز کنید.

۲) با فشار دکمه Start/Stop، دستگاه در هر زمانی در طول فرآیند آسیاب کردن متوقف می‌شود.

۳) دستگاه برای هر ۳ دقیقه کار باید ۳۰ دقیقه استراحت کند. پیشنهاد می‌شود از این دستگاه هر بار برای کمتر از ۹۰ ثانیه کار کنید و حداقل زمان استراحت ۹۰ ثانیه بین دو چرخه مداوم حفظ شود.

۴) دستگاه نمی‌تواند ۶ دقیقه مداوم را در ۱۰ دقیقه کار کند. اگر قرار است بیش از ۶ دقیقه کار کند باید استراحت ۳۰ دقیقه‌ای انجام شود.

۱۲. هنگامی که زمان آسیاب مورد نظر به پایان رسید، آسیاب قهوه به طور خودکار متوقف می‌شود و نشانگرهای “Start/Stop” و میزان قهوه آسیاب شده انتخاب شده روشن می‌شوند. سپس همه نشانگرها خاموش می‌شوند و دستگاه به حالت خواب می‌رود. برای فعال کردن مجدد دستگاه، می‌توانید هر دکمه‌ای را فشار دهید.

نکته: حداکثر مقدار محفظه قهوه آسیاب شده ۱۳۰ گرم است. مراقب باشید که قهوه آسیاب شده سرریز نشود.

نکته: پس از اتمام آسیاب کردن، قهوه آسیاب شده را در ظرف دیگری بریزید تا در صورت نیاز به آسیاب مجدد، سرریز نشود.

۱۳. دستگاه را از برق بکشید. درب محفظه قهوه آسیاب شده را بردارید و قهوه آسیاب شده را مستقیماً به درون ظرف دیگری بریزید.

آسیاب دانه‌های قهوه به صورت دستی

۱. عملیات مرحله ۱ تا ۶ آسیاب قهوه به صورت خودکار را طی کنید.
۲. درجه چرخش آسیاب را بچرخانید تا اندازه آسیاب مورد نظر خود را انتخاب کنید.
۳. دستگاه را به برق بزنید.

۷. محفظه قهوه آسیاب شده (با درب) را روی نگهدارنده محفظه قهوه آسیاب شده قرار دهید. اطمینان حاصل کنید که دهانه محفظه قهوه آسیاب شده با خروجی قهوه آسیاب شده هماهنگ باشد.

۸. دکمه چرخش آسیاب را بچرخانید تا اندازه آسیاب مورد نظر خود را انتخاب کنید. هرچه دکمه را به سمت چپ بچرخانید، قهوه آسیاب شده ریزتر و ریزتر می شود و هرچه به سمت راست بچرخانید، قهوه آسیاب شده درشت تر و درشت تر می شود.

۹. مقدار آسیاب قهوه بر اساس زمان آسیاب تعیین می شود و شما می توانید با رعایت جدول ۱ زمان آسیاب مورد نظر خود را انتخاب کنید. اگر نمی خواهید زمان آسیاب را تنظیم کنید، دستگاه تحت زمان پیش فرض آسیاب کار می کند.

جدول ۱

نشان	0S	10S	20S	30S	40S	50S
زمان آسیاب	۲ ثانیه	۱۰ ثانیه	۲۰ ثانیه	۳۰ ثانیه	۴۰ ثانیه	۵۰ ثانیه
۱ دقیقه (تنظیمات دستی)						

۱۰. دستگاه را به برق بزنید. نشانگر دکمه Start/Stop به مدت سه بار چشمک می زند و سپس کاملاً روشن می شود.


۱۱. دکمه Start/Stop را فشار دهید، نشانگر مربوطه آن چشمک می زند، سپس دستگاه شروع به کار می کند.

نکته:


(۱) در صورتی که ظرف ۹۰ ثانیه پس از وصل شدن، هیچ عملیاتی انجام نشود، دستگاه وارد حالت خواب می شود.

نکته: واحد آسیاب مجهز به یک میکروسوییچ است به طوری که باید قبل از کار در موقعیت خود سرهم‌بندی شود، در غیر این صورت دستگاه کار نخواهد کرد.

۴. باکس دانه قهوه را روی نگهدارنده باکس دانه قهوه به این صورت قرار دهید: ابتدا، علامت “☐” روی باکس دانه قهوه را با علامت “▲” روی بدنه بالایی را در یک راستا قرار دهید (شکل ۴). سپس باکس دانه قهوه را در جهت عقربه‌های ساعت بچرخانید تا علامت “☐” به علامت “▲” برسد (شکل ۵). اگر خواستید که باکس دانه قهوه را بردارید ابتدا صبر کنید که آسیاب کاملاً متوقف شود. سپس دکمه رهاسازی را فشار دهید و همزمان باکس دانه قهوه را خلاف جهت عقربه‌های ساعت به اندازه ۹۰ درجه بچرخانید و آن را از بدن اصلی جدا کنید.

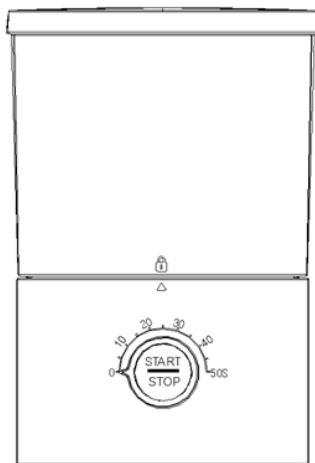

شکل ۴

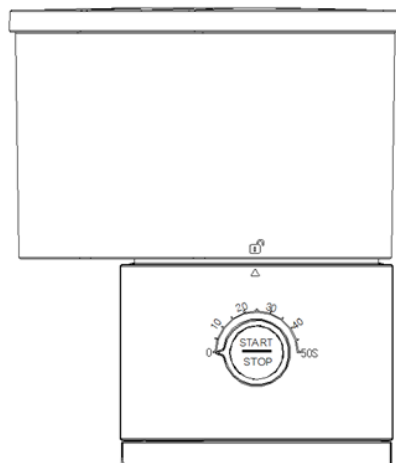


شکل ۵

۵. مقداری از دانه‌های قهوه را در باکس دانه قهوه بریزید. این میزان نباید بیشتر از ۲۴۰ گرم باشد.

۶. درب باکس دانه قهوه را ببندید.

آسیاب کاملاً متوقف شود. سپس دکمه رهاسازی را فشار دهید و همزمان واحد آسیاب را خلاف جهت عقربه‌های ساعت بچرخانید و آن را از بدن اصلی جدا کنید.

1.

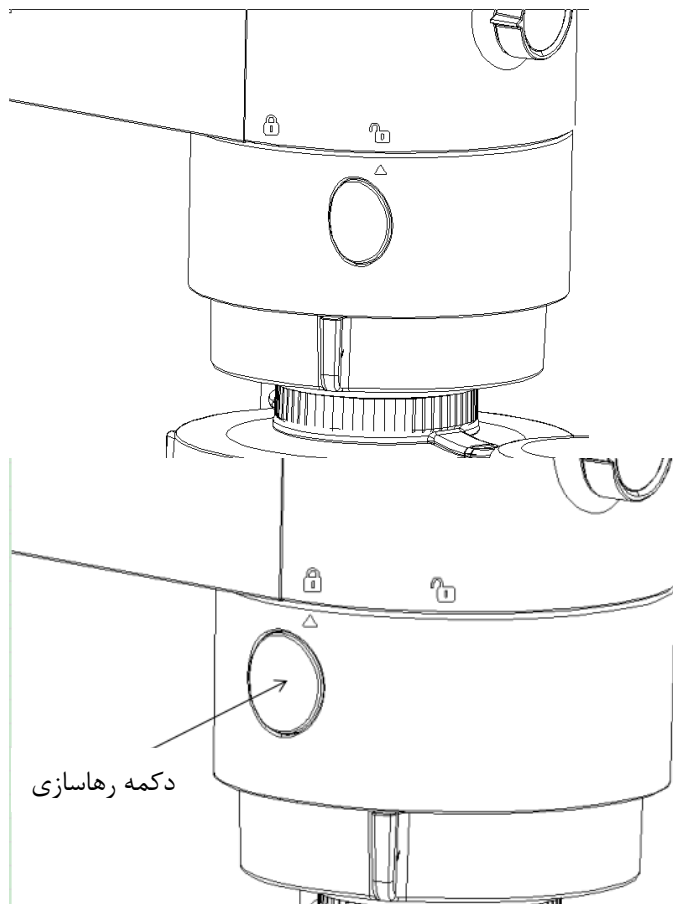


شکل ۲

عملکرد دستگاه

در این دستگاه، دانه‌های قهوه به صورت خودکار آسیاب می‌شود.

۱. قهوه‌ساب را روی یک سطح صاف قرار دهید.
۲. بررسی کنید و مطمئن شوید که درب پوششی به خوبی بسته شود (شکل ۱ را ببینید)، در غیر این صورت، واحد آسیاب نمی‌تواند به خوبی نصب شود و دستگاه کار نمی‌کند.

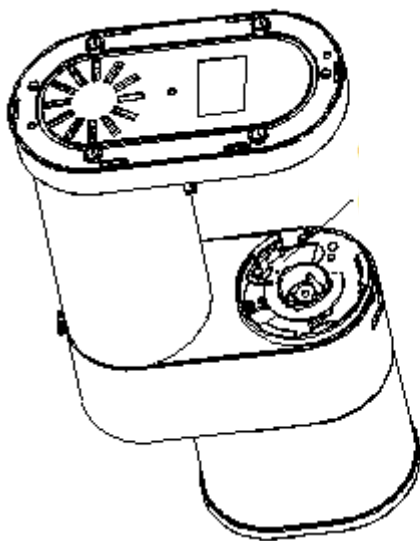

درب پوششی

(در قسمت پایین بخش بالایی)

شکل ۱

۳. واحد آسیاب را روی بخش بالایی به این صورت نصب کنید: ابتدا علامت “▲” روی واحد آسیاب را با علامت “■” در یک راستا قرار دهید (شکل ۲). سپس واحد آسیاب را در جهت عقربه‌های ساعت بچرخانید تا علامت “▲” به علامت “■” برسد (شکل ۳). اگر خواستید که واحد آسیاب را بردارید ابتدا صبر کنید که



قبل از اولین بار استفاده از دستگاه

۱. بسته‌بندی قهوه‌ساب خود را با احتیاط باز کنید و همه قطعات را خارج کنید.
۲. هرگونه گرد و غبار را پاک کنید.
۳. باکس دانه قهوه، درب باکس دانه قهوه، درب محفظه قهوه سابیده و محفظه قهوه‌سابیده را با آب بشوید و سپس کاملاً خشک کنید.


احتیاط: هرگز بدنه اصلی را برای تمیز کردن در آب غوطه‌ور نکنید و واحد آسیاب را برای تمیز کردن با نشوید.

فقط برای مصارف خانگی

نکات ویژه در مورد دوشاخه دستگاه

این دستگاه دارای یک دوشاخه پلاریزه است (یک تیغه پهن تر از دیگری است). برای کاهش خطر برق گرفتگی، این دوشاخه فقط از یک جهت در یک پریز پلاریزه قرار می گیرد. اگر دوشاخه به طور کامل در پریز قرار نمی گیرد، دوشاخه را برعکس کنید. اگر باز هم جا نرفت، با یک برقکار ماهر تماس بگیرید. به هیچ وجه سعی نکنید دوشاخه را تغییر دهید زیرا این کار به خاطر امنیت بیشتر انجام شده است.

با قهوه ساب خود آشنا شوید.

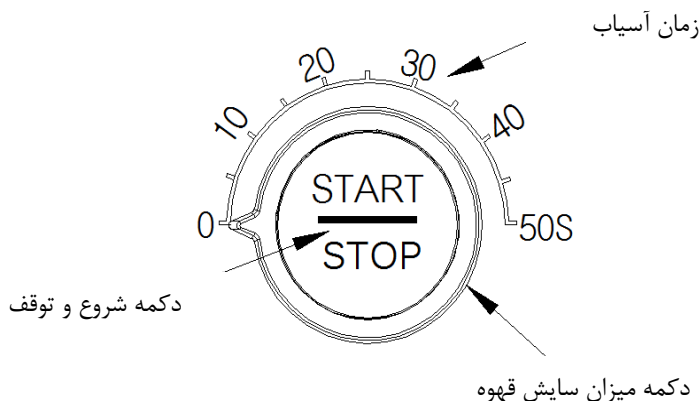

۱۳. استفاده از لوازم جانبی که توسط سازنده توصیه نشده باشد ممکن است باعث صدمه به افراد شود.
 ۱۴. در صورت شنیدن صدای غیرعادی، طعم غیرعادی، گرمای بیش از حد و دود در حین استفاده از دستگاه، فوراً دستگاه را خاموش کرده و برای تعمیر به نمایندگی مجاز ببرید.
 ۱۵. گرد و غبار و سایر اجسام خارجی را قبل از استفاده از دستگاه بروبید.
 ۱۶. از جدا کردن و تعمیر قطعات بدنه خودداری کنید.
 ۱۷. پس از هر بار استفاده، کنترل آسیاب را در موقعیت "۱" قرار دهید و اطمینان حاصل کنید که موتور قبل از جداسازی کاملاً متوقف شده باشد.
 ۱۸. دستگاه را با دست خیس یا حوله خیس به برق نزنید یا از برق نکشید.
 ۱۹. سیم برق را نکشید یا خم نکنید.
 ۲۰. دستگاه را به شدت تکان ندهید یا رها نکنید.
 ۲۱. قبل از استفاده، محفظه آسیاب را از نظر وجود اجسام خارجی بررسی کنید.
 ۲۲. افراد با ناتوانی‌های فیزیکی، حسی یا ذهنی یا فاقد تجربه و دانش در صورت نظارت افراد دیگر می‌توانند از دستگاه استفاده کنند.
 ۲۳. کودکان نباید با دستگاه بازی کنند.
 ۲۴. استفاده نادرست از دستگاه ممکن است باعث آسیب شود.
 ۲۵. دستگاه را برای کاربری‌های دیگر استفاده نکنید.
 ۲۶. از دستگاه را در فضای باز استفاده نکنید.
- این دستورالعمل‌ها را نزد خود نگه دارید.

هشدارهای مهم

هنگام استفاده از لوازم خانگی برقی، اقدامات امنیتی زیر را رعایت کنید:

۱. دستورالعمل مربوط به دستگاه را مطالعه نمایید.
۲. قبل از استفاده از دستگاه، ولتاژ درج شده در برچسب دستگاه را بررسی کنید و با برق خانه خود مطابقت دهید.
۳. از هیچ وسیله‌ای با کابل یا دوشاخه آسیب‌دیده استفاده نکنید یا اگر دستگاهتان خراب شد یا از دستتان افتاد، از استفاده از دستگاه خودداری کنید. دستگاه را برای معاینه و تعمیر به نزدیک‌ترین مرکز خدمات مجاز ببرید.
۴. زمانی که از دستگاه استفاده نمی‌کنید یا می‌خواهید آن را تمیز کنید، یا زمانی که می‌خواهید قطعات دستگاه را سرهم‌بندی یا جدا کنید، حتماً دستگاه را از برق بکشید.
۵. هنگام دست زدن به تیغه‌ها، تخلیه کاسه و تمیز کردن خیلی مراقب باشید.
۶. کابل دستگاه را روی لبه میز یا پیشخوان آویزان نکنید.
۷. بدنه پایینی و حاوی موتور را در مایعات غوطه‌ور نکنید یا در ماشین ظرفشویی قرار ندهید. در صورت غوطه‌ور شدن در مایع یا پر کردن مایع در ظرف، امکان آسیب دیدگی دستگاه وجود دارد. فقط امکان غوطه‌ور کردن بخش بالایی وجود دارد.
۸. اگر دستگاه در نزدیکی کودکان یا افراد ناتوان است، حتماً مراقب باشید.
۹. هرگز انگشتانتان را به قطعات در حال حرکت نزدیک نکنید.
۱۰. تا زمانی که تیغه‌ها کاملاً متوقف نشده‌اند، درب پوششی را برندارید.
۱۱. هرگز بدون قرار دادن درب پوششی، دستگاه را روشن نکنید.
۱۲. با دستگاه بدون قرار دادن مواد و خالی کار نکنید.



NEW LAND

New Generation of Appliance



قهوه ساب

مدل: NL-2954BA

فارسی ☐

English ☐