



QUALITY EXPERIENCE



Egg Boiler
Model: NL-2962BS

فارسی ☐
English ☐

IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed, including the following:


1. Read all instruction before using
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or the base in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. The heating element surface is subject to residual heat after use.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.




14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. CAUTION: Avoid injuries from the egg pricking device.

Save these instructions.

For household use only

Product introduction

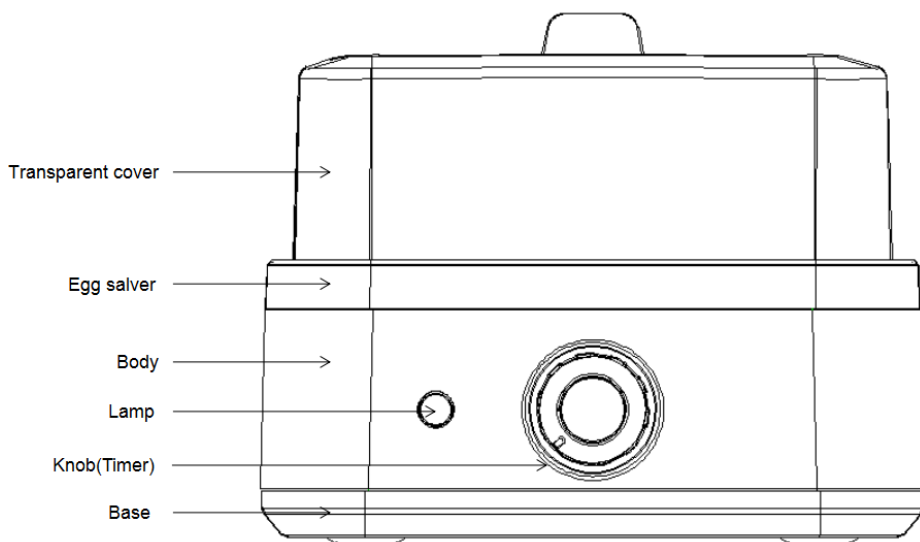

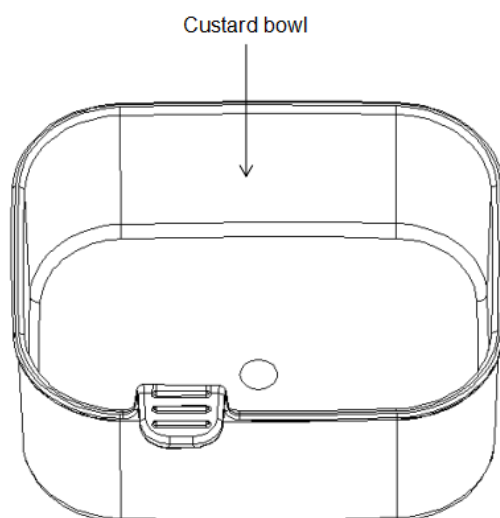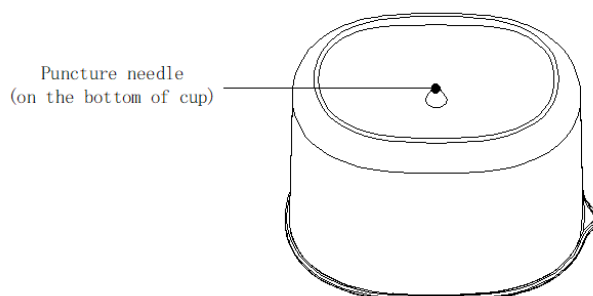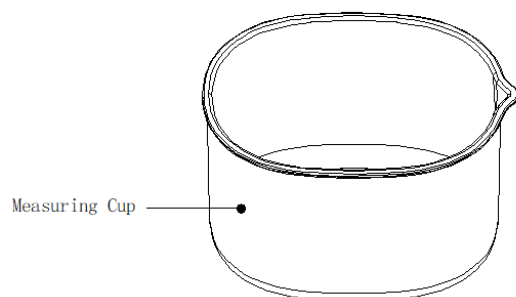

Before the first use

Before using the egg boiler at the first, please clean the egg boiler completely, put the attachments such as transparent cover, measuring cup, salvers etc into water (also adding the proper cleanser) and clean them. Fill the appliance with a measuring cup water, assemble all parts, but do not have egg and begin to operate, when the water is boiling, discard the water.

Note: Never immerse the base in the water for cleaning. Wipe the appearance of base and the heat tray with a wild and damp cloth or cleaner, never use a poisonous cleaner.

OPERATION

Boiled egg

1. For the first time, wipe the surface of the hot plate clean and add 120ml water to the hot plate.
2. Drilled the big end of the egg with the needle on the bottom of the measuring cup. Then put the egg on the egg salver, make sure the small end of the egg is downwards. As the small end can be inserted into the hole deeper, which may give the egg more balance. Then cover the transparent cover, plug in the power source, turning the switch on "-". The indicator on the switch will be illuminated.

Caution: the eggs must be pierced before boiling otherwise the eggs may explode during cooking.

3. Plug it in and twist the knob so that the knob pointer points to the appropriate scale (rare "☐", medium "◐", well done "◑") and the switch indicator lights up.
4. When the egg is cooked, you will hear a "ding" from the timer and the switch indicator light goes off.

Caution: After the eggs are cooked, please unplug the power to avoid safety risks.

5.Put the boiled egg into the cool water rapidly so that peeled easily, egg is at its peak flavor immediately after boiling.

Steaming egg custard

1. Break two eggs into the custard bowl, add 1~2g salt and other ingredient, some oil, mixing smooth.
2. Add the water into the mixture up to the level(“- Max”) indicated on the inside of custard bowl, mixing smooth.
3. Pour the water of the measuring cup on the heat tray, the quantity of water is at the “custard” scale of the district. Then assemble the egg salver.
4. Put the custard bowl on the salver, make sure the position is balanced. Then cover the transparent cover, plug in the power source, turning on the switch.
5. When the eggs are finished, audible sound from the thermostat will be heard. The indicator on the switch is still illuminated, Turn off the switch.Waiting for 30 seconds. Taking out and serve.

CLEANING AND MAINTENANCE

1. Unplug the power source and allow the appliance to cool down completely before cleaning.
- 2.Wash the transparent cover, measuring cup, salvers in hot soapy water, rinse and dry completely.
- 3.Don't clean any part with abrasive cleaners such as metal scouring pads, and scouring powder
4. Wipe the appearance of base and the heat tray with a wild and damp cloth or cleaner, never use a poisonous cleaner.

Warning: Never immerse the base in the water.

5.Store the boiler at the dry location such as a table top or counter top or a cupboard shelf, the power cord may be wound under the bottom of boiler.

6. Any other servicing should be performed by an authorized service representative.

ANALYSIS OF COMMON PROBLEMS

1. The indicator on the switch is off.

- a. It's a blackout.
- b. The socket is off.
- c. It wasn't plugged in.
- d. The switch is off.

2. The egg boiled is too hard or raw.

- a. The water added in the tray is too much or little (the more water, the better the eggs) .
- b. The heat plate is up.

3. The indicator on the switch is on, but no steam, and the egg is completely raw.

- a. Encountered this phenomenon, please contact the company's after-sales service department or the distributor.

The above method is still unable to troubleshoot, contact the company's after-sales service department or the distributor. Non professional personnel are not allowed to disassemble.

Environment friendly disposal



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center



Product Sepc:

Product name: Egg boiler	Model: NL-2962BS
Rated volts: 220-240V~	Rated frequency: 50-60Hz
Capacity: 6 eggs	Rated power: 400W

دفع سازگار با محیط زیست

شما می توانید به حفاظت از محیط زیست کمک کنید!
 لطفاً به قوانین محلی احترام بگذارید: تجهیزات الکتریکی
 بلااستفاده را به مرکز دفع زباله مناسب تحویل دهید.



مشخصات دستگاه

مدل: NL-2962BS	نام محصول: تخم مرغ پز
فرکانس: ۵۰-۶۰ هرتز	ولتاژ: ۲۲۰-۲۴۰ ولت
توان: ۴۰۰ وات	ظرفیت: ۶ تخم مرغ

تحلیل مشکلات رایج

۱. نشانگر روی سوئیچ خاموش است.

الف. ممکن است برق قطع شده باشد.

ب. پریز برق فعال نیست.

ج. دستگاه به برق نیست.

د. سوئیچ خاموش است.

۲. تخم مرغ آب پز شده بیش از حد پخته یا بیش از حد خام است.

الف. آب اضافه شده خیلی زیاد یا خیلی کم است (هرچه آب بیشتر باشد، تخم مرغها بهتر پخته می شود).

ب. صفحه حرارتی ممکن است رسوب گرفته باشد.

۳. نشانگر حالت روشن را نشان می دهد اما بخار تولید نمی شود و تخم مرغ کاملاً خام است.

الف. در صورت مواجهه با این پدیده، لطفاً با بخش خدمات پس از فروش شرکت یا فروشنده تماس بگیرید.

این مشکل قابل برطرف کردن نیست و نیازمند بررسی و تعمیر توسط خدمات پس از فروش است. افرادی که در این زمینه تسلط ندارند نباید نسبت به تعمیر دستگاه اقدام کنند.

۴. کاسه خاگینه را روی جا تخم مرغی بگذارید و حتماً مطمئن شوید که به خوبی در جای خود قرار بگیرد. سپس درپوش شفاف را قرار دهید. دستگاه را به برق بزنید و دکمه روشن را فشار دهید.
۵. هنگامی که پخت تخم مرغ تمام شد، از ترموستات صدایی به گوش می رسد. نشانگر روی سوئیچ همچنان روشن است. سوئیچ را خاموش کنید. ۳۰ ثانیه منتظر بمانید. سپس، غذا رو بیرون بیاورید و سرو کنید.

نظافت و نگهداری

۱. دستگاه را از برق بکشید و اجازه دهید دستگاه قبل از تمیز کردن کاملاً خنک شود.
۲. روکش شفاف، فنجان اندازه گیری و جا تخم مرغی را در آب گرم و صابون بشویید و کاملاً خشک کنید.
۳. هیچ قسمتی را با پاک کننده های ساینده مانند سیم ظرف شویی یا پودرهای قوی شوینده نشویید.
۴. پایه زیرین و سینی حرارتی را با یک پارچه مرطوب پاک کنید. هرگز از پاک کننده های سمی استفاده نکنید.

هشدار: هرگز پایه زیرین را در آب غوطه ور نکنید.

۵. تخم مرغ پز را در محل خشکی مانند بالای میز یا روی پیشخوان یا قفسه کمد نگهداری کنید. کابل دستگاه را زیر آن بپیچانید.
۶. هرگونه تعمیر دستگاه را توسط نمایندگی های مجاز انجام دهید.

احتیاط: تخم‌مرغ‌ها باید قبل از جوشیدن سوراخ شوند، در غیر این صورت ممکن است در حین پخت منفجر شوند.

۳. دستگاه را به برق بزنید و دستگیره را بچرخانید تا نشانگر دستگیره به مقیاس مناسب («عسلی» «نیم پز» «کاملاً پخته») اشاره کند و نشانگر سوئیچ روشن شود.

۴. هنگامی که تخم‌مرغ پخته شد، صدای «دنگ» را از تایمر می‌شنوید و چراغ نشانگر سوئیچ خاموش می‌شود.

احتیاط: پس از پخته شدن تخم‌مرغ‌ها، برای جلوگیری از هرگونه خطر، دستگاه را از برق بکشید.

۵. تخم‌مرغ آب پز شده را به سرعت در آب خنک بریزید تا به راحتی پوست کنده شود و خوش طعم شود.

خاگینه

۱. دو تخم‌مرغ را در کاسه خاگینه بشکنید. ۱ تا ۲ گرم نمک و مواد دلخواه دیگر را به همراه مقداری روغن اضافه کنید و یکدست هم بزنید.

۲. آب را تا سطح («Max») که در داخل کاسه خاگینه نشان داده شده است، به مخلوط اضافه کنید و یکدست هم بزنید.

۳. آب فنجان اندازه‌گیری را روی سینی حرارتی بریزید. مقدار آب را به اندازه کاسه اضافه کنید. سپس جا تخم‌مرغی را قرار دهید.

قبل از اولین بار استفاده از دستگاه، موارد زیر را رعایت کنید




قبل از استفاده از تخم‌مرغ‌پز، لطفاً آن را کاملاً تمیز کنید، لوازم جانبی مانند درپوشش شفاف، فنجان اندازه‌گیری، جا تخم‌مرغی و غیره را در آب قرار دهید و با یک شوینده مناسب بشویید. دستگاه را با یک پیمانه اندازه‌گیری آب پر کنید، همه قسمت‌ها را سرهم‌بندی کنید. تخم‌مرغ‌ها را فعلاً قرار ندهید. دستگاه را روشن کنید. وقتی آب جوش آمد، آب را دور بریزید.

نکته: هرگز بخش زیرین را در آب فرو نکنید. بخش زیرین و سینی حرارتی را با یک پارچه مرطوب یا پاک‌کننده پاک کنید، هرگز از پاک‌کننده‌های سمی استفاده نکنید.

عملکرد دستگاه

تخم‌مرغ آب‌پز

۱. در اولین بار استفاده، سطح صفحه داغ را پاک کنید و ۱۲۰ میلی‌لیتر آب به صفحه داغ اضافه کنید.
۲. انتهای بزرگ تخم‌مرغ را با سوزن در کف پیمانه سوراخ کنید. سپس تخم‌مرغ را روی جا تخم‌مرغی قرار دهید. اطمینان حاصل کنید که انتهای کوچک تخم‌مرغ به سمت پایین باشد. از آنجایی که انتهای کوچک را می‌توان در عمق بیشتری وارد سوراخ کرد، تعادل بیشتری به تخم‌مرغ می‌دهد. سپس درپوش شفاف را قرار دهید. دستگاه را به برق بزنید و سوئیچ را روشن کنید «-». نشانگر روی سوئیچ روشن خواهد شد.

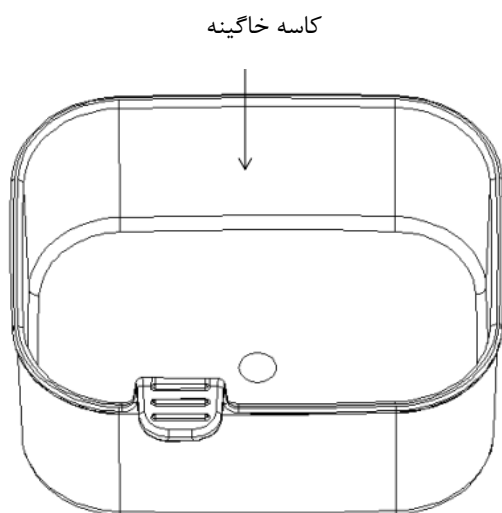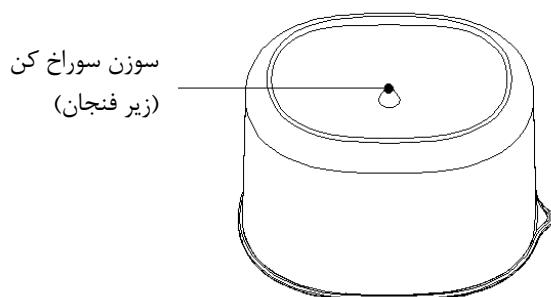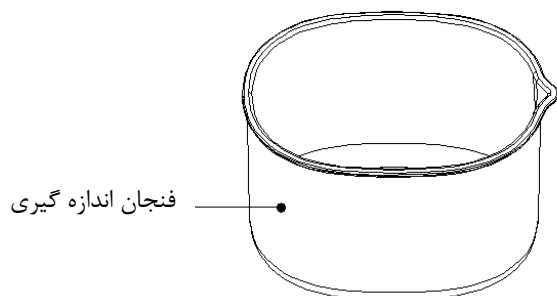

۱۲. قبل از کشیدن دوشاخه از برق، هرگونه کلید خاموش کننده را خاموش کنید.

۱۳. از دستگاه برای استفاده‌ای غیر از استفاده مورد نظر استفاده نکنید.

۱۴. افراد با ناتوانی‌های فیزیکی، حسی یا ذهنی یا فاقد تجربه و دانش در صورت نظارت افراد دیگر می‌توانند از دستگاه استفاده کنند.


۱۵. کودکان نباید با دستگاه بازی کنند.

۱۶. اگر کابل آسیب‌دیده است، باید توسط سازنده یا نمایندگی خدمات آن یا یک فرد واجد شرایط مشابه تعویض شود.

۱۷. احتیاط: هنگام برداشتن تخم‌مرغ‌های آب پز شده احتیاط کنید.

فقط برای مصارف خانگی

معرفی محصول

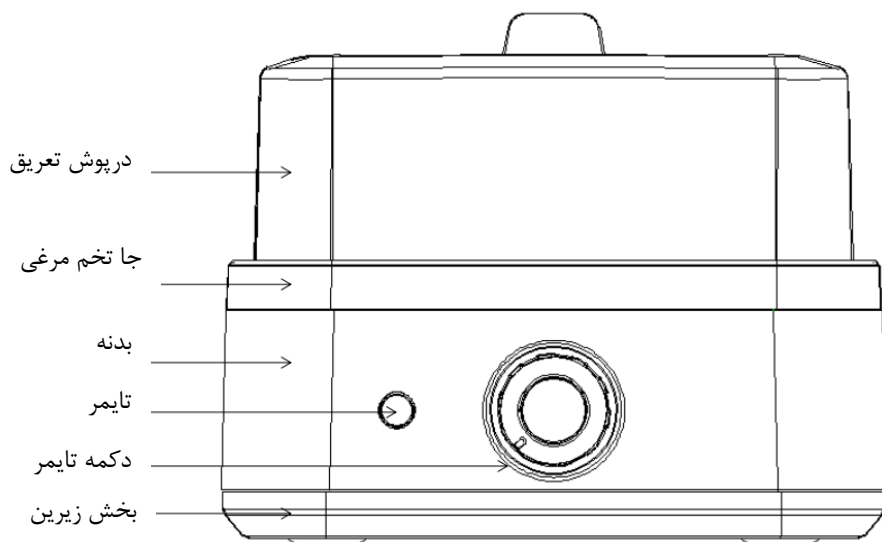

اقدامات مهم

هنگام استفاده از وسایل برقی، اقدامات احتیاطی زیر باید رعایت شود:

۱. قبل از استفاده تمام دستورالعمل‌ها را بخوانید.
۲. به سطوح داغ دست نزنید و از دستگیره استفاده کنید.
۳. برای محافظت در برابر برق‌گرفتگی، سیم، دوشاخه یا پایه را در آب یا مایعات دیگر غوطه‌ور نکنید.
۴. اگر کودکان با دستگاه نزدیک هستند یا با آن کار می‌کنند، خیلی مراقب باشید.
۵. زمانی که از دستگاه استفاده نمی‌کنید و یا می‌خواهید آن را تمیز کنید، آن را از برق بکشید. قبل از گذاشتن یا برداشتن قطعات، صبر کنید تا دستگاه خنک شود. المنت ممکن است همچنان مقداری گرم باشد.
۶. هیچ لوازم الکتریکی را کابل یا دوشاخه آسیب‌دیده استفاده نکنید و آن را برای تعمیر نزد یک تکنسین واجد شرایط ببرید.
۷. استفاده از لوازم جانبی که توسط سازنده دستگاه توصیه نشده است ممکن است باعث ایجاد آسیب شود.
۸. از دستگاه در فضای باز استفاده نکنید.
۹. اجازه ندهید که کابل روی لبه میز یا پیشخوان آویزان شود یا با سطح داغ تماس پیدا کند.
۱۰. دستگاه را روی یا نزدیک اجاق گازی یا برقی داغ یا در فر گرم شده قرار ندهید.
۱۱. هنگام جابجایی دستگاه حاوی روغن داغ یا سایر مایعات داغ، احتیاط کنید.

 **NEW LAND**

New Generation of Appliance



تخم مرغ پز

مدل: NL-2962BS

فارسی ☐

English ☐