




QUALITY EXPERIENCE

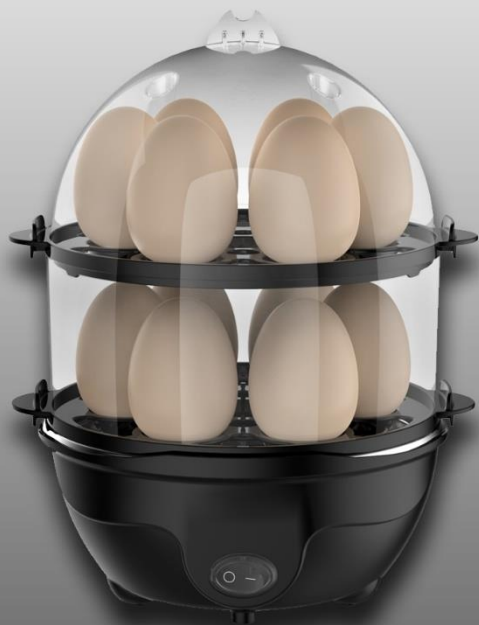

Egg Boiler

Model: NL-2966BL

فارسی ☐

English ☐

IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed, including the following:


1. Read all instruction before using
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or the base in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. The heating element surface is subject to residual heat after use.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn any control to "off", then remove plug from wall outlet.


13. Do not use appliance for other than intended use.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. CAUTION: Avoid injuries from the egg pricking device.

Save these instructions.

For household use only

Product introduction

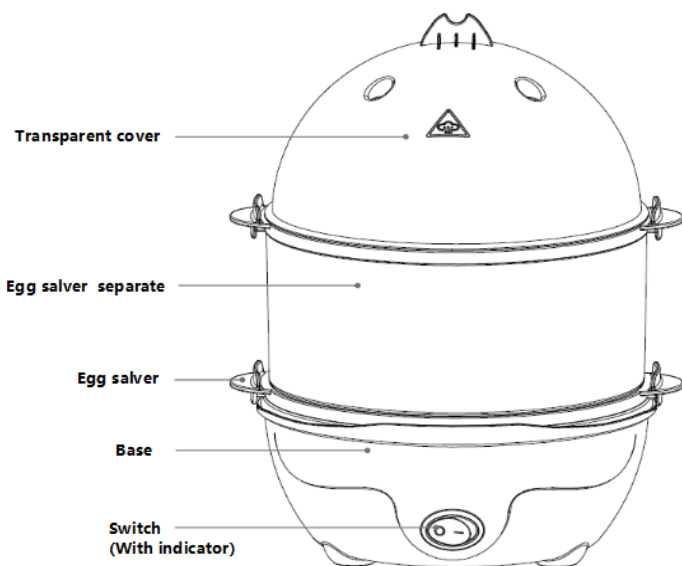

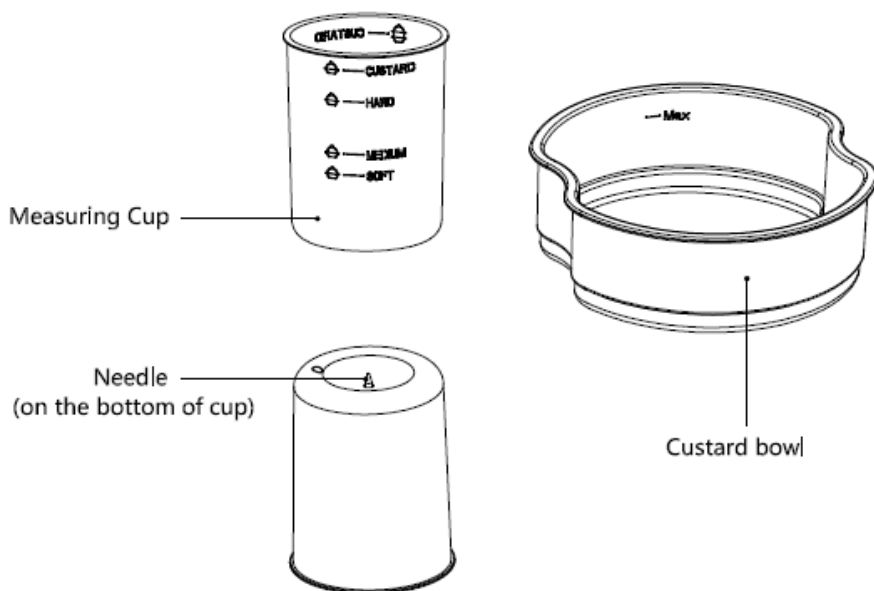

Before the first use

Before using the egg boiler at the first, please clean the egg boiler completely, put the attachments such as transparent cover, measuring cup, salvers etc into water (also adding the proper cleanser) and clean them. Fill the appliance with a measuring cup water, assemble all parts, but do not have egg and begin to operate, when the water is boiling, discard the water.

Note: Never immerse the base in the water for cleaning. Wipe the appearance of base and the heat tray with a wild and damp cloth or cleaner, never use a poisonous cleaner.

OPERATION

Boiled egg

1. For the first use, wipe the surface of the heat tray, fill the heat tray with water according to your taste(soft, medium or hard).

2. Reference the above fig, add proper amount water, for example, if you want to boil some eggs, and the egg must be tender, then the quantity of water is at the “soft” scale of the district.
3. Pour the water of the measuring cup on the heat tray, then assemble the egg salver.
4. Drilled the big end of the egg with the needle on the bottom of the measuring cup. Then put the egg on the egg salver, make sure the small end of the egg is downwards. As the small end can be inserted into the hole deeper, which may give the egg more balance. Then cover the transparent cover, plug in the power source, turning the switch on”-”. The indicator on the switch will be illuminated.

Caution: the eggs must be pierced before boiling; otherwise the eggs may explode during cooking.

5. When the eggs are finished, an audible sound from the thermostat will be heard. The indicator on the switch is still illuminated, Turn off the switch.

Warning: after eggs are finished, switch off and plug off; otherwise, the thermostat can be reset automatically when egg boiler is cooled, then continue to cycle as dry boil-cut off, with energy waste and safety risk.

6. Put the boiled egg into the cool water rapidly so that peeled easily, egg is at its peak flavor immediately after boiling.


Steaming egg custard

1. Break two eggs into the custard bowl, add 1~2g salt and other ingredient, some oil, mixing smooth.
2. Add the water into the mixture up to the level(“- Max”) indicated on the inside of custard bowl, mixing smooth.
3. Pour the water of the measuring cup on the heat tray, the quantity of water is at the “custard” scale of the district. Then assemble the egg salver.

4. Put the custard bowl on the salver, make sure the position is balanced. Then cover the transparent cover, plug in the power source, turning on the switch.

5. When the eggs are finished, audible sound from the thermostat will be heard. The indicator on the switch is still illuminated, Turn off the switch. Waiting for 30 seconds. Taking out and serve.

Egg separating spoon: Remove the shell and strain the egg whites into the bowl. Leave the yolk the spoon.

Note: using the appliance for cooking, please refer to the scale”” on the measuring cup”.

CLEANING AND MAINTENANCE

1. Unplug the power source and allow the appliance to cool down completely before cleaning.
2. Wash the transparent cover, measuring cup, salvers in hot soapy water, rinse and dry completely.
3. Don't clean any part with abrasive cleaners such as metal scouring pads, and scouring powder
4. Wipe the appearance of base and the heat tray with a wild and damp cloth or cleaner. Never use a poisonous cleaner.

Warning: Never immerse the base in the water.

5.Store the boiler at the dry location such as a table top or counter top or a cupboard shelf, the power cord may be wound under the bottom of boiler.

6.Any other servicing should be performed by an authorized service representative.

ANALYSIS OF COMMON PROBLEMS

1.The indicator on the switch is off.

- a. It's a blackout.
- b. The socket is off.
- c. It wasn't plugged in.
- d. The switch is off.

2.The egg boiled is too hart or raw.

- a. The water added in the stray is too much or little (the more water,the better the eggs) .
- b. The heat plate fur up.

3.The indicator on the switch is on, but no steam, and the egg is completely raw.

- a. Encountered this phenomenon, please contact the company's after-sales service department or the distributor.

The above method is still unable to troubleshoot, contact the company's after-sales service department or the distributor. Non professional personnel are not allowed to disassemble.

Environment friendly disposal



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center



Product Sepc:

Product name: Egg boiler	
Rated volts: 220-240V~	Rated frequency: 50-60Hz
Capacity: 14 eggs	Rated power: 350W

اقدامات مهم

هنگام استفاده از لوازم خانگی برقی، اقدامات امنیتی زیر را رعایت کنید:

۱. دستورالعمل مربوط به دستگاه را مطالعه نمایید.
۲. سطوح داغ را لمس نکنید و از دستگیره استفاده کنید.
۳. برای محافظت خود در برابر خطر برق گرفتگی، سیم، دوشاخه و موتور دستگاه در آب یا مایعات دیگر قرار ندهید.
۴. هنگامی که کودکان با دستگاه کار می کنند یا نزدیک آن هستند، نظارت کافی داشته باشید.
۵. زمانی که از دستگاه استفاده نمی کنید، یا زمانی که می خواهید قطعات دستگاه را سرهم بندی یا جدا کنید، و یا آن را تمیز کنید، اجازه دهید تا دستگاه خنک شود. المنت حرارتی، پس از خاموش شدن نیز تا حدودی گرم باقی می ماند.
۶. هرگز لوازم با سیم آسیب دیده را استفاده نکنید و برای تعمیر به مرکز خدمات مجاز ببرید.
۷. استفاده از لوازم جانبی که توسط سازنده توصیه نمی شود، ممکن است باعث آسیب شود.
۸. از دستگاه در فضای باز استفاده نکنید.
۹. کابل دستگاه را روی لبه میز یا پیشخوان آویزان نکنید.
۱۰. هرگز این دستگاه را روی یا نزدیک اجاق گازی یا برقی یا فر داغ قرار ندهید.
۱۱. هنگام جابجایی دستگاه حاوی روغن داغ یا سایر مایعات داغ باید بسیار احتیاط کنید.

۱۲. قبل از کشیدن دستگاه از برق، حتماً آن را خاموش کنید و سپس، دوشاخه را از برق بکشید.

۱۳. از دستگاه برای استفاده‌ای غیر از آنچه طراحی شده استفاده نکنید.

۱۴. افراد با ناتوانی‌های فیزیکی، حسی یا ذهنی یا فاقد تجربه و دانش در صورت نظارت افراد دیگر می‌توانند از دستگاه استفاده کنند. دستگاه را از کودکان دور کنید.


۱۵. کودکان نباید با دستگاه بازی کنند.

۱۶. اگر کابل دستگاه آسیب دیده است، باید توسط مراکز خدمات مجاز جایگزین شود.

۱۷. احتیاط: هنگام برداشتن تخم‌مرغ‌ها، احتیاط لازم را به عمل آورید.

فقط برای مصارف خانگی

معرفی محصول

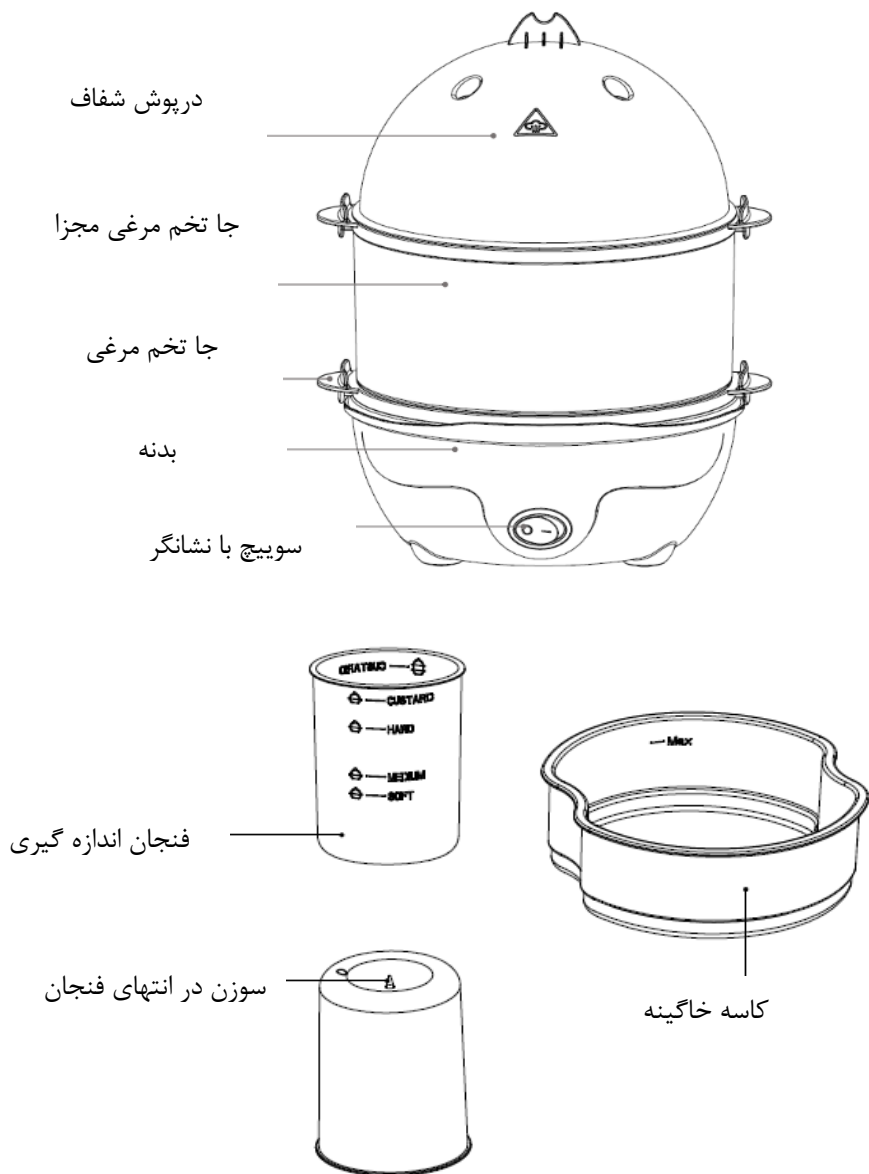

قبل از اولین استفاده از دستگاه، به نکات زیر توجه نمایید:

قبل از استفاده از تخم‌مرغ‌پز، ابتدا آن را کاملاً تمیز کنید. لوازم جانبی مانند درپوش شفاف، فنجان اندازه‌گیری، جاتخم‌مرغی و غیره را در آب قرار دهید (همچنین پاک‌کننده مناسب را اضافه کنید) و آنها را تمیز کنید. دستگاه را با یک پیمانه اندازه‌گیری آب پر کنید. همه قسمت‌ها را سرهم‌بندی کنید. فعلاً تخم‌مرغی قرار ندهید. دستگاه را روشن کنید. وقتی آب جوش آمد، یک بار دور بریزید.

توجه: هرگز بدنه را برای تمیز کردن در آب غوطه‌ور نکنید. روی بدنه و سینی حرارتی را با یک پارچه مرطوب و پاک‌کننده پاک کنید. هرگز از پاک‌کننده‌های سمی استفاده نکنید.

عملکرد دستگاه

تخم‌مرغ آب‌پز

۱. برای اولین استفاده، سطح سینی حرارتی را پاک کنید و با مقدار دلخواه آب

(برای تخم‌مرغ عسلی، متوسط و کاملاً پخته) پر کنید.

۲. به شکل بالا مراجعه کنید و مقدار مناسب آب اضافه کنید. برای مثال، اگر

می‌خواهید تخم‌مرغ عسلی شود ارتفاع آب تا سطح soft باشد.

۳. آب پیمانه را روی سینی حرارتی بریزید، سپس جاتخم‌مرغی را قرار دهید.

۴. انتهای بزرگ تخم‌مرغ را با سوزن در پیمانه سوراخ کنید. سپس تخم‌مرغ را

روی جاتخم‌مرغی قرار دهید. مطمئن شوید که انتهای کوچک تخم‌مرغ به

سمت پایین باشد. از آنجایی که انتهای کوچک را می‌توان در عمق بیشتری

وارد سوراخ کرد، تعادل بیشتری به تخم‌مرغ می‌دهد. سپس درپوش شفاف

را قرار دهید و دستگاه را به برق بزنید. سوئیچ را روشن کنید «-». نشانگر روی سوئیچ، روشن خواهد شد.

احتیاط: تخم‌مرغ‌ها باید قبل از جوشاندن سوراخ شوند. در غیر این صورت تخم‌مرغ‌ها ممکن است در حین پخت منفجر شوند.

۵. هنگامی که پخت تخم‌مرغ‌ها به پایان رسید، صدایی از ترموستات شنیده می‌شود. نشانگر روی سوئیچ همچنان روشن است. سوئیچ را خاموش کنید.

هشدار: هنگامی که پخت تخم‌مرغ‌ها به پایان رسید، دستگاه را خاموش کنید و از برق بکشید. در غیر این صورت، ترموستات دوباره به طور خودکار پس از خنگ شدن دستگاه روشن می‌شود. این چرخه ادامه پیدا می‌کند و آب موجود خشک می‌شود و اتلاف انرژی و خطر ایمنی به دنبال دارد.

۶. تخم‌مرغ آب پز شده را به سرعت در آب خنک بریزید تا به راحتی پوست کنده شود و خوش طعم شود.

خاگینه

۱. تخم‌مرغ‌ها را در کاسه بشکنید و ۱ تا ۲ گرم نمک، مواد دلخواه و مقداری روغن اضافه کنید و یکدست به هم بزنید.


۲. آب را تا سطح «Max» که در داخل کاسه خاگینه نشان داده شده است، به مخلوط اضافه کنید و یکدست هم بزنید.

۳. آب فنجان اندازه‌گیری مناسب خاگینه را روی سینی حرارتی بریزید. سپس، جاتخم‌مرغی را قرار دهید.

۴. ظرف خاگینه ساز را روی جاتخم مرغی قرار دهید. درپوش شفاف را روی آن قرار دهید. دستگاه را به برق بزنید و سپس روشن کنید.

۵. هنگامی که پخت تخم مرغ ها به پایان رسید، صدایی از ترموستات شنیده می شود. نشانگر روی سوئیچ همچنان روشن است. سوئیچ را خاموش کنید. ۳۰ ثانیه صبر کنید و سپس، خاگینه را بیرون بیاورید و سرو کنید.

قاشق جداکننده تخم مرغ: پوست تخم مرغ را جدا کرده و سفیده ها را داخل کاسه جدا کنید. زرده را روی قاشق باقی بگذارید.

توجه: برای استفاده صحیح و پخت مناسب، به بخش اندازه ها «» و فنجان اندازه گیری مراجعه نمایید.

نظافت و نگهداری

۱. دستگاه را از برق بکشید و اجازه دهید دستگاه قبل از تمیز کردن کاملاً خنک شود.

۲. درپوش شفاف، فنجان اندازه گیری و جاتخم مرغی را در آب گرم و صابون بشویید و کاملاً خشک کنید.

۳. هیچ قسمتی را با پاک کننده های ساینده مانند سیم ظرف شویی یا پودرهای قوی شوینده نشویید.

۴. پایه زیرین و سینی حرارتی را با یک پارچه مرطوب پاک کنید. هرگز از پاک کننده های سمی استفاده نکنید.

هشدار: هرگز پایه زیرین را در آب غوطه ور نکنید.

۵. تخم‌مرغ‌پز را در محل خشکی مانند بالای میز یا روی پیشخوان یا قفسه کمد نگهداری کنید. کابل دستگاه را زیر آن بپیچانید.
۶. هرگونه تعمیر دستگاه را توسط نمایندگی‌های مجاز انجام دهید.

تحلیل مشکلات رایج

۱. نشانگر روی سوئیچ خاموش است.

الف. ممکن است برق قطع شده باشد.

ب. پریز برق فعال نیست.

ج. دستگاه به برق نیست.

د. سوئیچ خاموش است.

۲. تخم‌مرغ آب پز شده بیش از حد پخته یا بیش از حد خام است.

الف. آب اضافه شده خیلی زیاد یا خیلی کم است (هرچه آب بیشتر باشد، تخم‌مرغ‌ها بهتر پخته می‌شود).

ب. صفحه حرارتی ممکن است رسوب گرفته باشد.

۳. نشانگر حالت روشن را نشان می‌دهد اما بخار تولید نمی‌شود و تخم‌مرغ کاملاً خام است.

الف. در صورت مواجهه با این پدیده، لطفاً با بخش خدمات پس از فروش شرکت یا فروشنده تماس بگیرید.

این مشکل قابل برطرف کردن نیست و نیازمند بررسی و تعمیر توسط خدمات پس از فروش است. افرادی که در این زمینه تسلط ندارند نباید نسبت به تعمیر دستگاه اقدام کنند.

دفع سازگار با محیط زیست

شما می‌توانید به حفاظت از محیط‌زیست کمک کنید! لطفاً به قوانین محلی احترام بگذارید: تجهیزات الکتریکی بلااستفاده را به مرکز دفع زباله مناسب تحویل دهید.





مشخصات دستگاه

مدل: NL-2966BL	نام محصول: تخم‌مرغ‌پز
فرکانس: ۵۰-۶۰ هرتز	ولتاژ: ۲۲۰-۲۴۰ ولت
توان: ۳۵۰ وات	ظرفیت: 14 تخم‌مرغ

NEW LAND

New Generation of Appliance

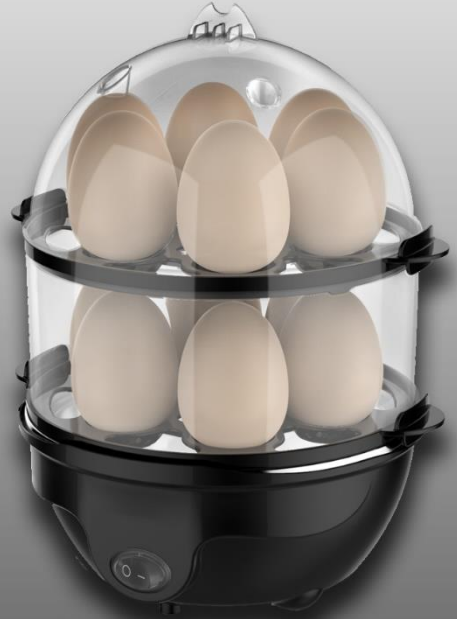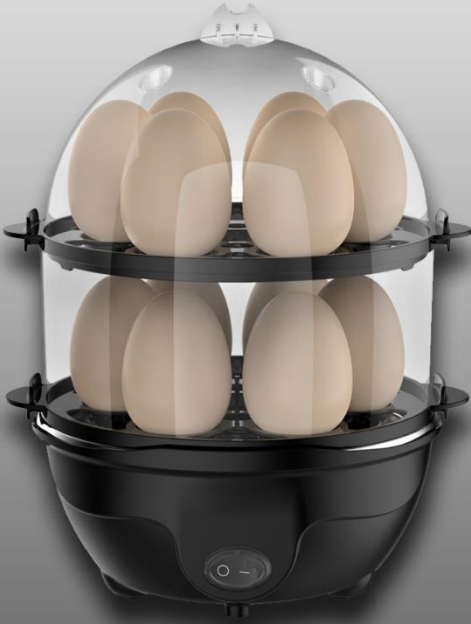

تخم مرغ پز

مدل: NL-2966BL

فارسی ☐

English ☐